









UTTERMOST




ASSEMBLY INSTRUCTIONS

ITEM #04129

Assembly Hardware List

A		6mm x 12mm Bolt	2 PCS
B		6mm x 45mm Bolt	2 PCS
C		Washer	4 PCS
D		Roller	2 PCS
E		Nut	2 PCS
F		Magnet Clip	5 PCS
G		Wrench	1 PC
H		Allen Wrench	1 PC

Assembly Parts List

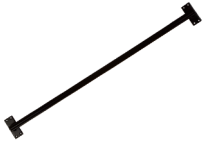1		Chalkboard	1 PC
2		Handle	1 PC
3		Roller Bar	1 PC


Additional Tools (NOT INCLUDED):

- POWER DRILL and DRILL BITS.
 - Wood or General Purpose Bit
 - Philips Head Driver
- PENCIL

NOTE: It is recommended to have an additional person available to help install this item.

STEP 1: Prop the CHALKBOARD (1) in an upright position and install the HANDLE (2) onto the front using BOLT (A), tighten with ALLEN WRENCH (H).

STEP 2: Place the ROLLER BAR (3) between the bracket uprights on the top of the CHALKBOARD. With the bar in place, assemble the ROLLER (D) inside each of the bracket uprights using BOLT (B), WASHER (C), and NUT (E). See diagram below. Use the provided tools (G, H) to tighten.

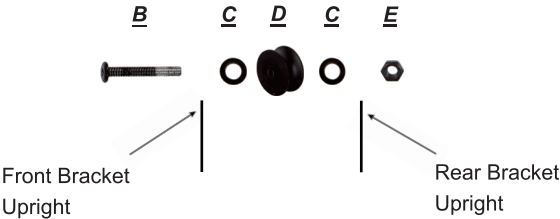

STEP 3: Lift the assembled chalkboard into the desired location and mark the eight mounting holes in the ROLLER BAR for drilling. Drill all holes, then using eight of the provided WOOD SCREWS and WALL ANCHORS, mount the chalkboard in place.

