



UTTERMOST

Assembly Instruction

STYLE: 06085


Parts list

A	Clock Parts	1PC
B	Center Clock Movement	1PC

Hardware list

Cardboard For Fixing The Clock Movement	1PC
--	------------


Step 1

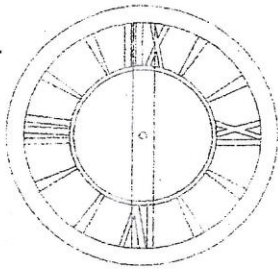

1. Take the parts carefully out of the carton, and then place them on a flat and soft surface, making sure that the parts will not be damaged.



Step 2

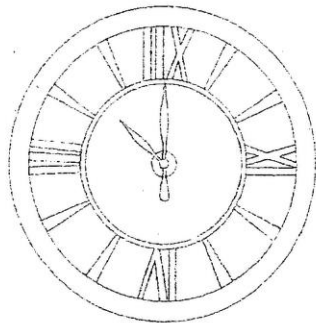

2. The cardboard with a hole for fixing the center clock movement by screw and please put it on the wall to secure the screw as the step 2, you can adjust the position of the clock hand at what your time.

To Clean, wipe with soft dry cloth.