




UTTERMOST

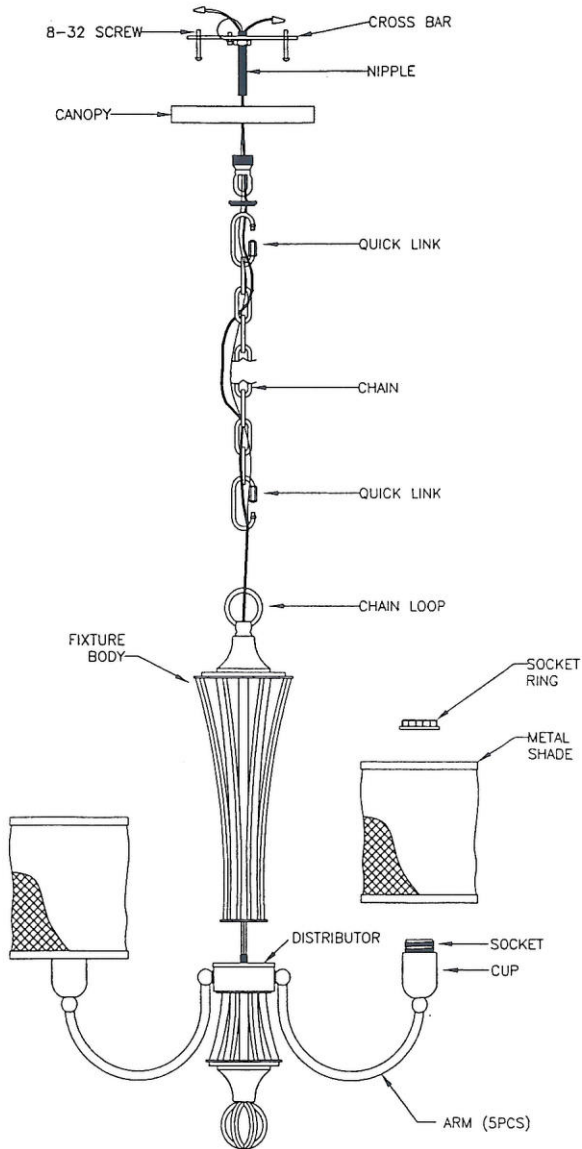

MODEL: 21259

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

TOOLS

YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: LADDER, SCREWDRIVER, ADJUSTABLE WRENCH, WIRE CUTTERS AND PLIERS.

UNPACK THE FIXTURE

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: CANOPY, 5' CHAIN, (2)QUICK LINK, FIXTURE BODY, ARM ASSEMBLY, (5) METAL SHADES AND (5) SOCKET RINGS.

MOUNTING HARDWARE PACKAGE:

SCREW COLLAR LOOP, SCREW COLLAR NUT, NIPPLE, (2)8-32 x 1" SCREWS, CROSS BAR, GREEN GROUND SCREW, (3)WIRE CONNECTORS. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

FIXTURE ASSEMBLY

1. THE ARMS HAVE BEEN TURNED TO LAY FLAT FOR SHIPPING. CAREFULLY TURN EACH ARM TO THEIR PROPER POSITION.

2. DETERMINE THE LENGTH OF CHAIN REQUIRED TO HANG THE FIXTURE AT THE DESIRED HEIGHT. USING QUICK LINK ATTACH TO THE CHAIN LOOP ON TOP OF THE FIXTURE. REMOVE OR ADD CHAIN AS DESIRED AT THIS TIME. LACE FIXTURE WIRE AND GROUND WIRE UP THROUGH EVERY OTHER LINK OF CHAIN.

3. SCREW FIXTURE BODY TO THE TOP OF DISTRIBUTOR.

STOP COMPLETE INSTALLATION INSTRUCTIONS BEFORE CONTINUING TO FINAL ASSEMBLY.**

FINAL ASSEMBLY

1. ATTACH A METAL SHADE TO EACH SOCKET AND SECURE WITH SOCKET RING.

2. INSTALL THE INCLUDED ANTIQUE 60 WATT EDISON BULB OR 60 WATT MAX. TYPE "A" BULB (NOT INCLUDED) INTO EACH SOCKET.

4. RESTORE POWER. YOUR FIXTURE IS NOW READY TO USE.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com