

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 21273

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Carefully unpack all lamp parts from carton. We suggest a licensed electrician for all fixture installations.

1. Take the lamp carefully out of the Carton, and place on a flat surface.
2. Be sure power to the installation point is OFF. Follow the steps below for assembly.
3. Fasten the **Cross bar** to the outlet box. Secure the **Nipple** onto the **Ceiling Canopy** with **Ceiling Chain Hook**.
4. Adjust the length of wire needed for your installation, remove excess. Adjust chain length as needed. Thread **Quick Link #1** into **Ceiling Chain Hook** on the **Canopy**, then **Quick Link #2** into **Fixture Hook** on the **Fixture Body**. Hand tighten until snug.
5. Pass the supply wires through the **Ceiling Canopy** and the **hole** in the middle of the **Cross Bar**.
6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire. Connect the wires as shown. (See Figure 1)
 - A. Connect the House Ground Wire to the Fixture Ground Wire.
 - B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
 - C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
 - D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
7. Push the **Ceiling Canopy** upward over the Outlet Box. Thread the Canopy Lock Ring onto the **Ceiling Chain Hooker** and tighten until snug to secure the **Ceiling Canopy**.
8. Install the correct **Bulb** (Bulb Not Included) into the **Socket** until snug.
9. When fixture is not levelled please adjust fixture as below: (See Figure 2)
 - Spet 1: Take out Leather Strap from Hooker.
 - Spet 2: Then revolve Hooker from anticlockwise until fixture is level.
 - Spet 3: Insert Leather Strap back onto Hooker.

Your installation is completed now. Restore electricity.

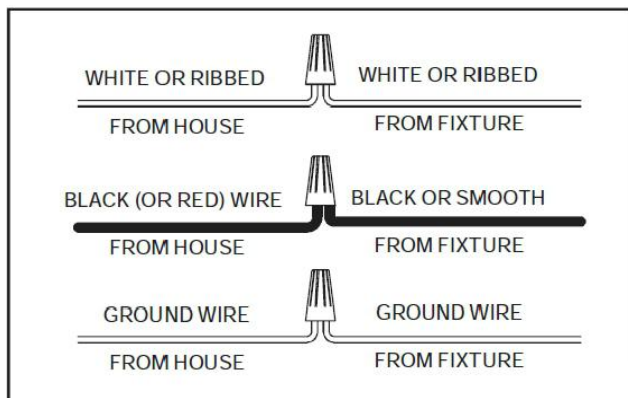


Figure 1

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 21273

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

