



UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 21279

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off
3. Fasten the **Crossbar** to the outlet box . Locate the **Nipple** and thread into the center of the **Crossbar**.
4. Locate the **Fixture Chain** 、 **Ceiling Canopy** 、 **Canopy Chain Loop** 、 and **Canopy Lock ring**. Pass the Fixture Supply Wire and Ground Wires through in the following order: **1)Alternate Fixture Loops in the Fixture Chain; 2)Canopy Lock ring; 3)Canopy Chain Loop; 4)Ceiling Canopy**.
Finally, proceed to pass the wires through the **Nipple** attached to the **Crossbar**.
5. Thread the BT58 Edison Bulb (Included) onto the Socket. Hand tighten until snug

