



UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 21281

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off
3. Determine the number of **Rods** to be assembled to the **Fixture Body** according to your hanging height. Pass supply wires through the **Rods**, thread the **Rods** onto the **Coupling** on the top of the **Fixture Body**, hand tighten until snug.
4. Attach one end of the **Quick Link** on the bottom of **Canopy**, and then attach the other end of the Quick Link onto the **Rods**.
5. Pass the supply wires through the **Ceiling Canopy** and the hole middle of the **Crossbar**.
6. Thread one **Hex Nut** onto the top end of the **Nipple**. Place one **Lock Washer** over the top end of the **Nipple** and then thread the **Nipple** into the center lock hole of the **Crossbar**. Then Using pliers, thread the Hex Nut against the Crossbar and hand tighten until snug.
7. Attach the **Ceiling Canopy** and the **Lock Washer** over the end of the **Nipple** and secure with the **Hex Nut**. Hand tighten until snug. Then Thread the **Lock Ball** onto the end of the **Nipple** and hand tighten until snug.
8. Located the following components over the end of the stem in turn **Diffuser**, **Rubb washer**, **Flat washer**.
9. Install correct **Bulbs** referring to fixture markings and /or labels for maximum wattage. (Not Included)

