



 
UTTERMOST

# ASSEMBLY INSTRUCTIONS

## STYLE# 21298

Carefully unpack all lamp parts from the carton.

1. Unfold support arms on fixture assembly to proper locations.
2. Take the lamp carefully out of the Carton and place it on a flat surface.
3. Be sure the power to the installation point is power off.
4. Thread the top end of stem (B) into the coupling at the underside of fixture body (A). Hand tighten until snug
5. Pass the center hole of bottom column (C) over the stem (B) and secure with finial (D). Hand tighten until snug.
6. Hang the wood beads (E) on arm hole of the body (A)
7. Place the Decorative cover (F) onto each socket of fixture body (A).
8. Install proper bulbs (not included) referring to fixture markings and/or labels for maximum

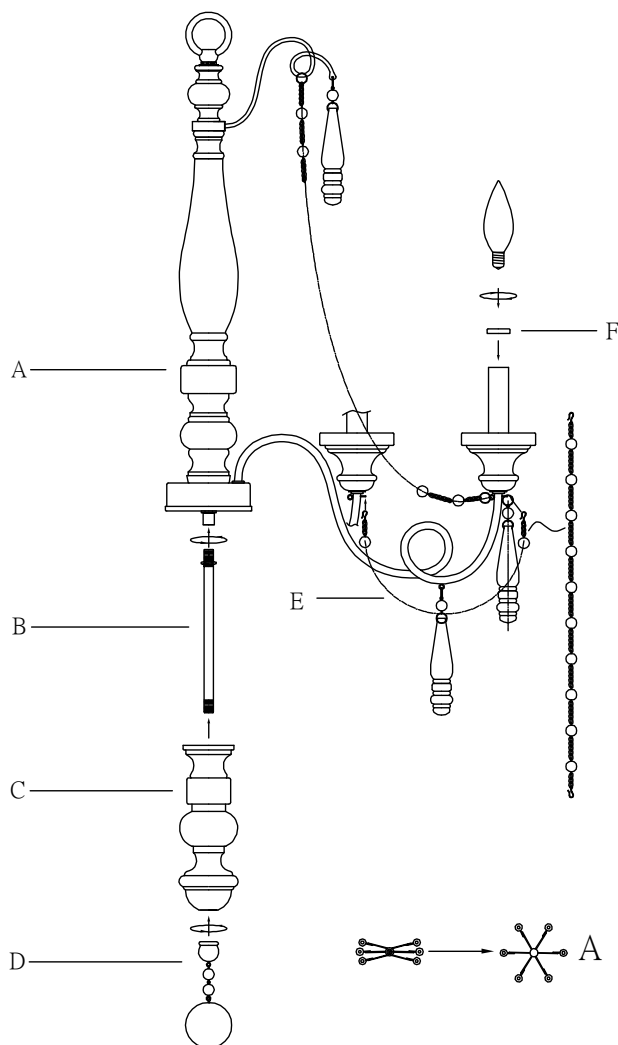



UTTERMOST

## STEP 1 - Install Crossbar

A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

## STEP 2 - Install Canopy Chain Loop and Nipple

Shut off the main electrical supply from the main fuse box/circuit breaker. Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace. A. Adjust the Fixture Chain (GG) to your desired length by removing the links if needed.

Pliers is required for this step.

 
B. With the Fixture Chain (GG) not attached to the Fixture Loop and the Canopy Chain Loop (EE), pull the supply wires through the Fixture Chain (GG) alternating links. After the wires are through the Fixture Chain (GG), pull the Supply Wires and the Ground Wire through the Canopy Lock Ring (FF) and the Ceiling Canopy (II) in order.

C. Attach one end of the Fixture Chain (GG) to the Fixture Loop with one Quick Link (HH). Lift the fixture and Fixture Chain (GG) up And Attach the other end of the Fixture Chain (GG) onto the Canopy Chain Loop (EE) with another Quick Link (HH). The fixture will now hang safely. Close the chain loop at the Ceiling Canopy Loop (EE).

D. Feed the Supply Wires and Ground Wire through the Canopy Chain Loop (EE) and Nipple (DD) into the Outlet Box. Cut the wires leaving approximately 8" of wire extending from the Outlet Box.


E. Refer to Step 5 for wire connections.

F. Raise the Ceiling Canopy (II) and Canopy Lock Ring (FF) up the Fixture Chain (GG) and over the Canopy Chain Loop (EE). Tighten the Canopy Lock Ring (FF) onto the Canopy Chain Loop (EE) until tight

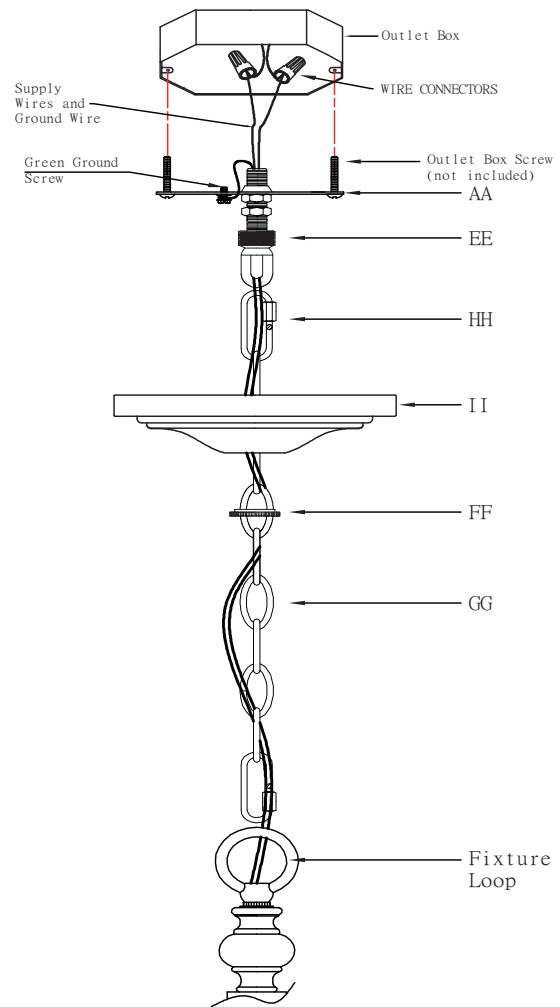

## STEP 3 - Wire Connections

 A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

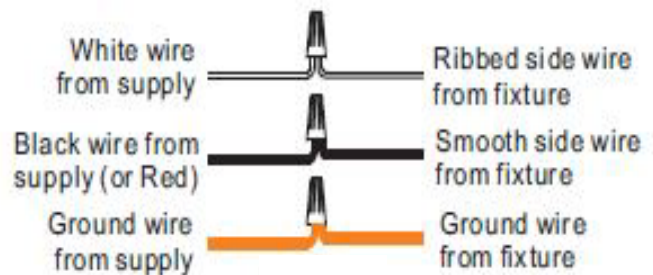

Your installation is completed now. Restore electricity.