




 

UTTERMOST

# ASSEMBLY INSTRUCTIONS

## STYLE# 21298

**Carefully unpack all lamp parts from the carton.**

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off. This lamp must be installed on reinforced Outlet Box.
3. Fasten the **Cross bar** to the **outlet box**. Secure the **Nipple#1** onto the **Canopy** with **Loop #1**.
4. Adjust chain length as needed. Thread **Quick Link#1** into **Loop #1** on the Canopy, then **Quick Link #2** into **Loop #2** on the Lamp Body. Hand tighten until snug.
5. Pass the supply wires through the **Ceiling Canopy** and the hole in the middle of the **Universal Bar**.
6. Thread the **Part A** into the **Nipple#2** by turning **Part A** clockwise to tighten until snug. Hang **Part B** on **Part A**;
7. Hang **Part C**, **Part D** and **Part E** on the corresponding place of the lamp body according to the position of the drawing.
8. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.  
Connect the wires as shown. **A.** Connect the House Ground Wire to the Fixture Ground Wire.  
**B.** Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).  
**C.** Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).  
**D.** Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
9. Install correct Bulbs referring to fixture markings and/or labels for maximum wattage. (Not Included)

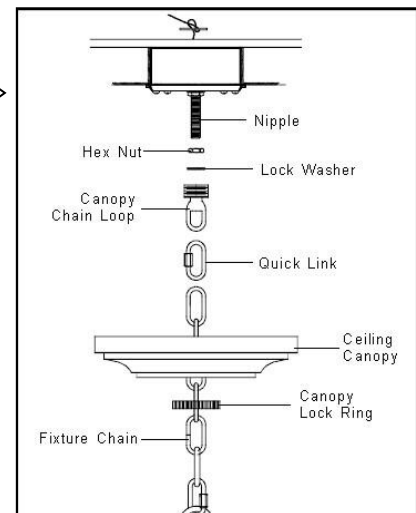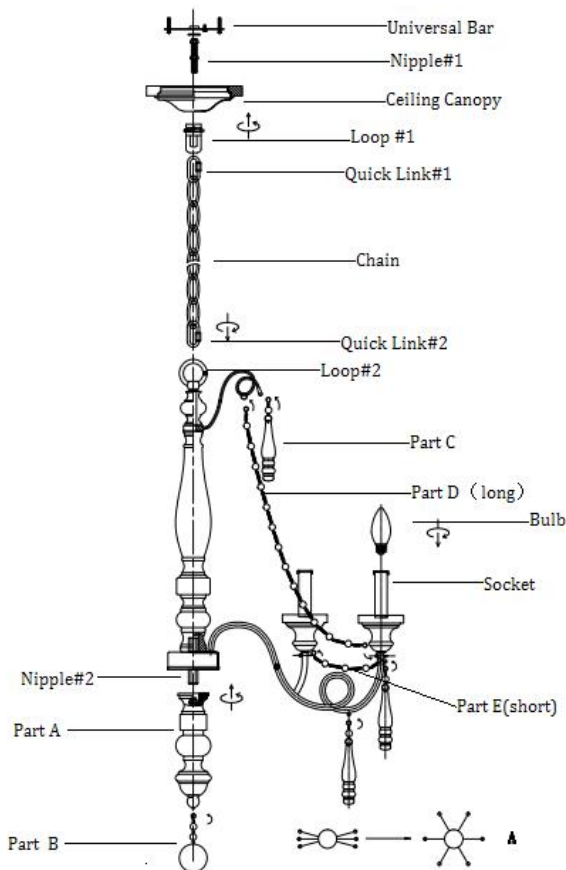

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www. uttermost.com