



UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 21321

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the carton, and place it on a flat surface.
2. Be sure the power to the installation point is powered off.
3. Adjust cord to desired length for your ceiling height. **Cut and remove excess cord.**
4. Thread **Nipple#2** on the bottom of the **Rod** onto the **Rod Base**, then secure it with **Finial Screw**. Hand tighten until snug. Secure the rest eight rods the same way.
5. Fasten the **Cross bar** to the outlet box. Locate the **Washer** and **Nipple #1**, then thread them into the center of the **Cross Bar**.
6. Secure **Nipple #1** onto the **Canopy** with **Loop#1**.
7. Thread **Loop #2** onto **Nipple #2**. Hand tighten until snug.
8. Connect the **Chain** and **Loop #1** with **Quick Link #1**, then connect **Loop #2** with **Quick Link#2**.
9. Pass supply wire through **Loop #2** and **Quick Link #2**, then wind onto the **Chain** and thread from the center of the **Cross Bar**.
10. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.
11. Connect the wires as shown:
A. Connect the House Ground Wire to the Fixture Ground Wire.
B. Connect the House White or Ribbed Wire to the Fixture Supply Wire (White or Ribbed Side).
C. Connect the House Black/Red Wire to the Fixture Supply Wire (Black or Smooth Side).
D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
12. Adjust each **Wire** to a natural bending situation.
13. Install correct **Bulbs**(Not Included) referring to fixture markings and/or labels for maximum wattage.

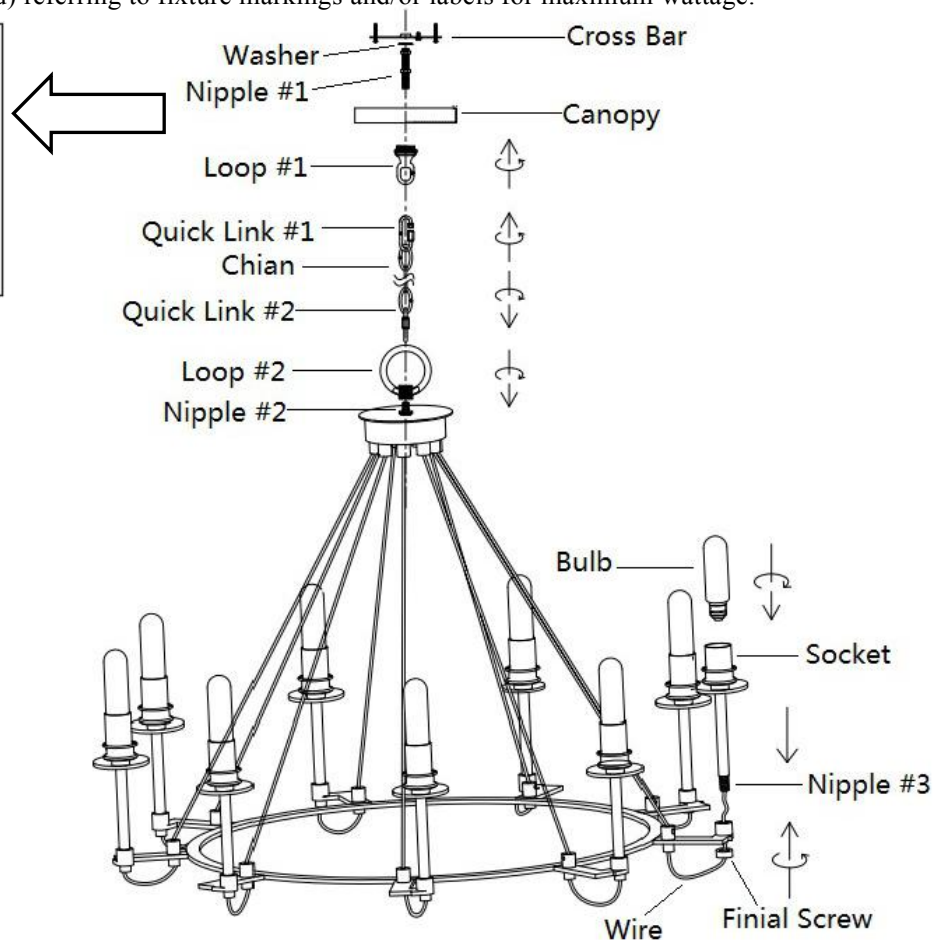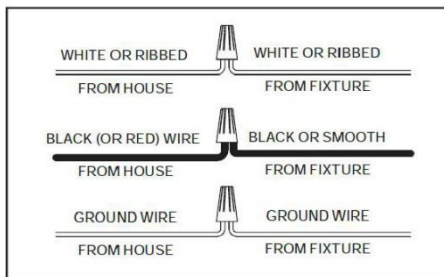

21321