

# UTTERMOST

## ASSEMBLY INSTRUCTIONS

**STYLE#: 21325**

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF

*Carefully unpack all lamp parts from the carton.*

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Fasten the **Crossbar** to the **Canopy**. Thread **Screws** to secure it. Hand tighten until snug.
4. Determine the number of **Rods** to be assembled according to your hanging height. Pass supply wires through the **Rods**. Thread the **Rods** to connect the **Swivel** and **Fixture Body**. Hand tighten until snug.
5. Pass the supply wires through the **Swivel** and **Canopy** and the hole in the middle of the **Cross Bar**.
6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.  
Connect the wires as shown.**A.**Connect the House Ground Wire to the Fixture Ground Wire.  
**B.**Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).  
**C.**Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).  
**D.**Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
7. Place the **Glass Shade** carefully. Thread the **Metal Sleeve** and **Part A** onto the **Socket**. Then use **Plastic Wrench** to lock the **Socket Collar** to secure the **Glass Shade**. Hand tighten until snug.
8. Install the correct **Edison Bulb** (Not Included) onto the **Socket** referring to fixture markings and/or labels for maximum wattage.

**Your installation is completed now. Restore electricity.**

