



UTTERMOST

## ASSEMBLY INSTRUCTIONS

### 21336

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE. WE SUGGEST A LICENSED ELECTRICIAN FOR ALL FIXTURE INSTALLATIONS.

### Installation Steps

- Carefully unpack your new fixture and lay out all the parts on a clear surface.
- Adjust wire length as needed for your installation removing excess. Select stem lengths needed for your installation. Assemble the Stem together using the Nipple, then attach the bottom end of Stem onto the Coupling tightly, then secure the Loop onto the Stem. Set the position of the Loop and lock the Loop position with wrench.
- Attach the Loop on the stem to the canopy Loop by using the quick link.
- Thread the Mounting screws into the matching holes of the Back plate, and tighten with the Hex nut. Thread the Ground screw into the hole of the Back plate. Secure the Back plate to the outlet box with the Outlet box screws. Thread the Wood screw into the hole of the Back plate. Secure the Back plate to the Plastic anchor.
- Make Wire connections with Wire Connector:
  - The smooth wire (w/ marking) from fixture to Black Wire from power source.
  - The ribbed wire (w/o marking) from Fixture to White Wire from power source.
  - Attach the Ground Wire and house ground wire to the Mounting bar with the green Ground screw. Carefully tuck wires back into the Outlet Box.
- Place the fixture Canopy over the two Mounting screws so they protrude through the holes in the Canopy. Thread the Ball nut onto the Mounting screws and continue turning until the fixture is snug against the ceiling.
- Install the Glass shade into the Socket, then secure them with the Socket ring.
- Install the light bulb in accordance with the fixture's specifications.  
**DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
- Turn on the power at fuse or Circuit Box.

