



UTTERMOST


 

ASSEMBLY INSTRUCTIONS

STYLE# **21517**

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Carefully unpack all lamp parts from carton. We suggest a licensed electrician for all fixture installations.

1. Take the lamp carefully out of the Carton, and place on a flat surface.
2. Be sure power to the installation point is OFF. Follow the steps below for assembly.
3. Adjust the length of wire needed for your installation, remove excess. Determine the number of **Rods** to be assembled to the **Fixture Body** as needed for your hanging height. Pull the Supply Wire with Ground Wire through the selected **Rods** and **Loop** and **Quick Link**. Thread the **Rods** & connect **Nipple**. Hand tighten.
4. Attach one end of the **Quick Link#1** and **Loop#1** on the bottom of **Canopy**, and then attach the other end of the **Quick Link#2** onto the **Rods**.
5. Secure the **Crossbar** to the outlet box with outletbox screws. Tighten until snug.
6. Connect the wire as shown.
 - a. Connect the House Ground Wire to the Fixture Ground Wire, secure with wire nut.
 - b. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side), secure with wire nut.
 - c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side), secure with wire nut.
 - d. Carefully stuff all of the connected wires into the Outlet Box.
7. Install the correct **Bulb** (Not Included) into the **Socket** until snug.

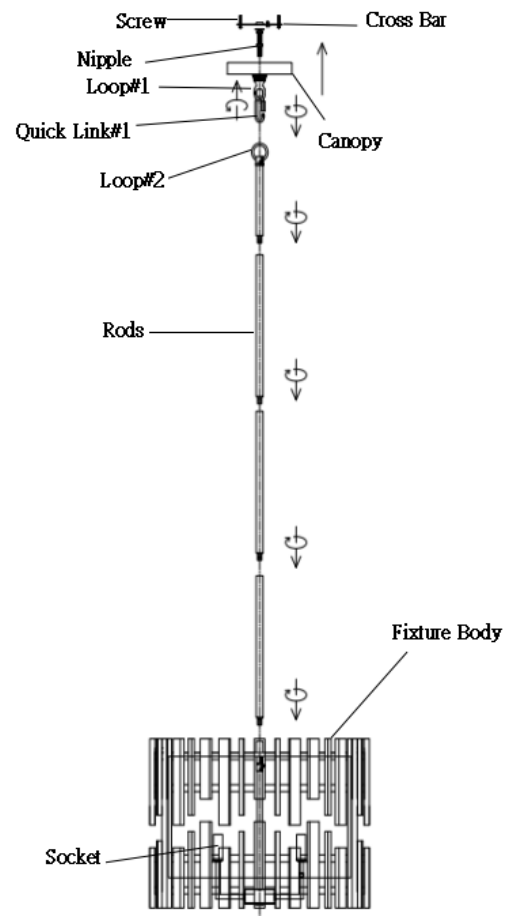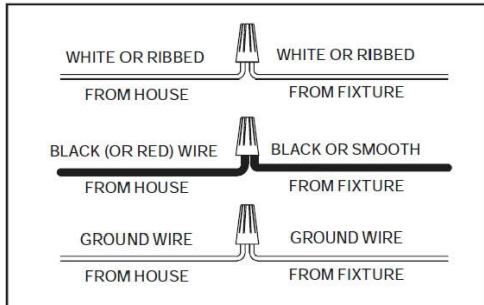

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com