

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 21522

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Carefully unpack all lamp parts from carton. We suggest a licensed electrician for all fixture installations.

1. Take the lamp carefully out of the Carton, and place on a flat surface.
2. Be sure power to the installation point is OFF. Follow the steps below for assembly.
3. Fasten the **Cross bar** to the outlet box. Secure the **Nipple** onto the **Canopy** with **Loop #1**.
4. Secure **Loop #2** onto the **Nipple #2** with **Fixture Body** and thread **Part A** into Loop #2 on the Fixture Body. Hand tighten until snug.
5. Adjust the length of wire needed for your installation, remove excess. Adjust chain length as needed. Thread **Quick Link #1** into **Loop #1** on the **Canopy**. place the **Chain** and **Loop #2** on the **Part A**, then thread the **Part B** onto the **Part A**. Hand tighten until snug.
6. Pass the supply wires through the **Canopy** and the **hole** in the middle of the **Cross Bar**.
7. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.

Connect the wires as shown. **A.** Connect the House Ground Wire to the Fixture Ground Wire.


 

B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).

C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).

D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.

8. Install the correct Bulb (Bulb Included) into the Socket until snug.

Your installation is completed now. Restore electricity.

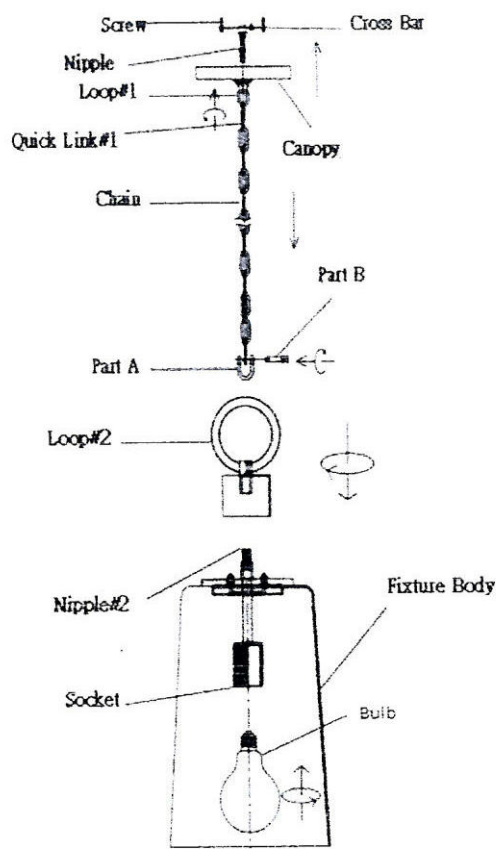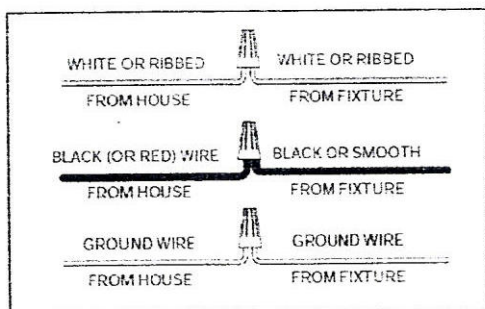

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com