

UTTERMOST

ASSEMBLY INSTRUCTIONS



STYLE#: 21538

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Carefully unpack all lamp parts from carton. We suggest a licensed electrician for all fixture installations.

1. Take the lamp carefully out of the Carton, and place on a flat surface.
2. Be sure power to the installation point is OFF. Follow the steps below for assembly.
3. Pull up the **Socket** clockwise slowly by 90 degree until the **ONE Socket** facing up, **ONE Socket** facing down.
4. Install correct **Bulbs** referring to fixture markings and/or labels for maximum wattage. (T30 Bulbs Included)
5. Place **Glass Shade** over the **Socket**, then push the thread through the Hole in the **Glass Shade** and hand tighten the **Nuts** into place.
6. Determine the number of **Rods** for assembled to the **Fixture Body** as needed to hang at your determined height. Adjust the length of wire needed for your installation leaving extra for wiring to the box, remove excess. Pull the Supply Wire with Ground Wire through the selected **Rods** and **Swivel**. Thread the **Rods & connect Nipple**. Hand tighten.
7. Pass the supply wire through the **Universal Bar** assembly, secure the **Universal Bar** to the Outlet Box with Outlet Box Screws.
8. Connect the wire as shown.
 - a. Connect the House Ground Wire to the Fixture Ground Wire, secure with wire nut.
 - b. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side), secure with wire nut.
 - c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side), secure with wire nut.
 - d. Carefully stuff all of the connected wires into the Outlet Box.
9. Place the **Canopy** over the **Mounting Screws** and secure with **Mounting Balls**. Hand-tighten until snug.

Your installation is completed now. Restore electricity.

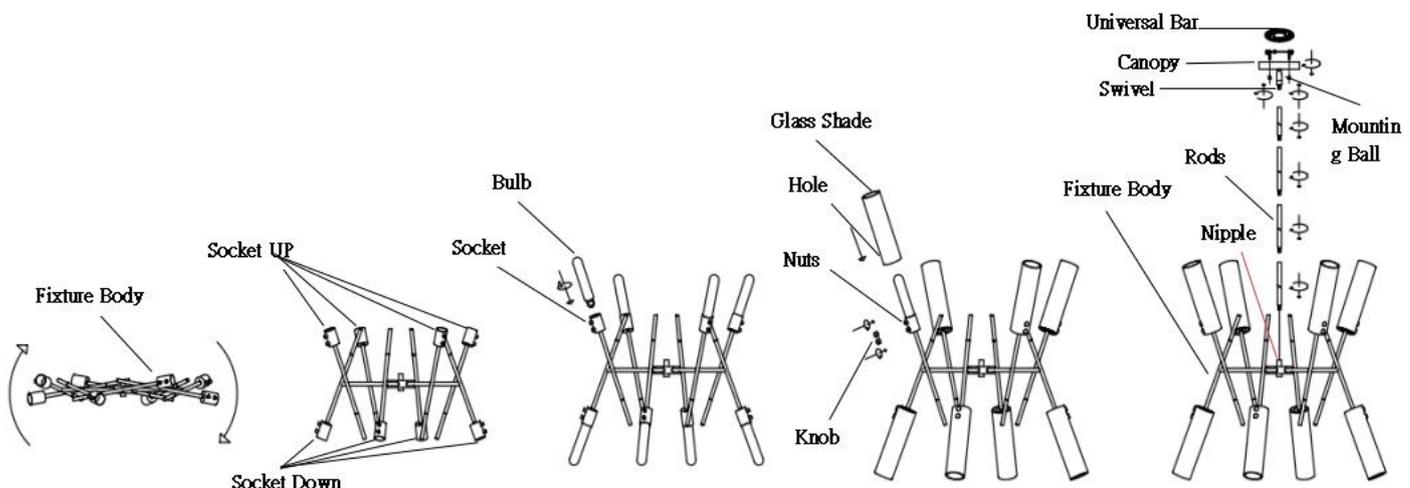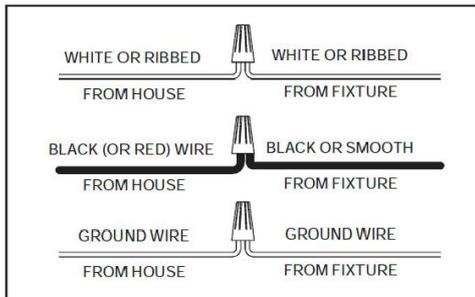

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com