

UTTERMOST

ASSEMBLY INSTRUCTIONS

21586

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF

POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

We suggest a licensed electrician for all fixture installations

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on a clear surface.
2. Secure mounting bar (B) to outlet box with outlet box screws (E). Thread nipple (F) into mounting bar (B) and secure with lock washer (A) and hex nut (D). Do not thread nipple less than three turns. Attach loop (G) to nipple (F).
3. Assemble the center nipple with hex nut (K), and coupling (L) tube (M) and cover (N) on the large fixture loop (O).
4. Adjust chain & wire length and **remove excess** for your install. Connect the chain (I) to the large fixture loop (O) at the top of the fixture.
5. Slide the screw collar ring (J) and canopy (H) in order over chain (I), lace fixture wires up through the chain (I), and pass wires through the hole in screw collar (G).
6. Attach the top end of the chain (I) to the screw collar (G), which has been mounted to the ceiling nipple. Be sure to close all chain links completely.
7. Attach the top end of the chain (I) to the screw collar (G), which has been mounted to the ceiling nipple. Be sure to close all chain links completely.
8. Make wire connections with wire connector:
 - The smooth wire (w/o marking) from fixture to black wire from power source.
 - The ribbed wire (w/o marking) from fixture to white wire from power source.
 - Attach the ground wire and house ground wire to the mounting bar (B) with the green ground screw (C). Carefully tuck wires back into the outlet box.
9. Attach the arm (P) and hook (Q) onto the hook (R).
10. Install the bulb into the socket (S). **DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
11. Assemble the glass panel (T) and the glass panel (U) onto the screw (V) & (W) well. If you need the glass panels movable, you can loosen the screw (V) & (W) a little.
12. Turn on the power at fuse or circuit box.

