

UTTERMOST

ASSEMBLY INSTRUCTIONS

21618

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING FIXTURE.

We suggest a licensed electrician for all fixture installations.

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on a clear surface.
2. Thread the Mounting Screws into the matching holes of the Mounting Bar, and tighten with the Hex Nut. Thread the Ground Screw (Green) into the Mounting Bar. Secure the Mounting Bar to the Outlet Box with the Outlet Box Screws. Thread the Nipple into the Mounting Bar center hole.

3. Adjust the length of wire needed for your installation, remove excess. Determine the length of Chain needed to be assembled to the fixture as needed for the proper hanging height for installation. Weave the wires through the Chain, Quick Link and Collar Loop.

Make Wire connections with Wire Connectors:

-- The smooth wire (w/ marking) from fixture to Black Wire from power source.

--The ribbed wire (w/o marking) from Fixture to White Wire from power source.

--Attach the Ground Wire and house ground wire to the Mounting Bar with the green Ground Screw.

Carefully tuck wires back into the Outlet Box.

4. Place the fixture Canopy up to the ceiling over the Nipple and use the Collar Loop and Nut to tighten the Canopy onto the Nipple until the assembly is secure. Attach the Quick Link in the Chain to the Collar Loop.
5. Install the light bulbs in accordance with the fixture's specifications. DO NOT EXCEED THE MAXIMUM WATTAGE RATING.
6. Turn on the power at fuse or Circuit Box.

