



UTTERMOST

STYLE NO.: 21909

Assembly Instruction

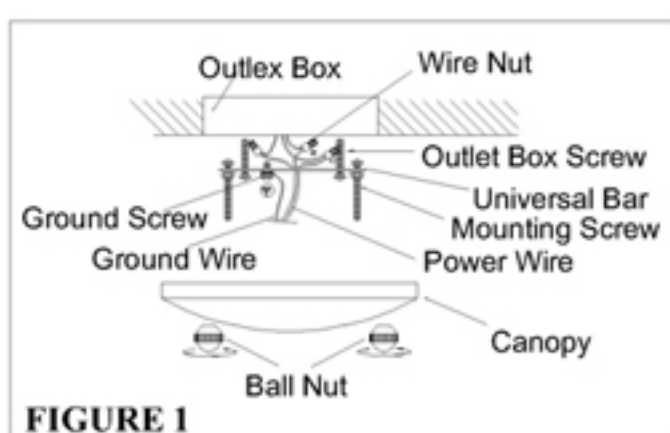 


FIGURE 1

 
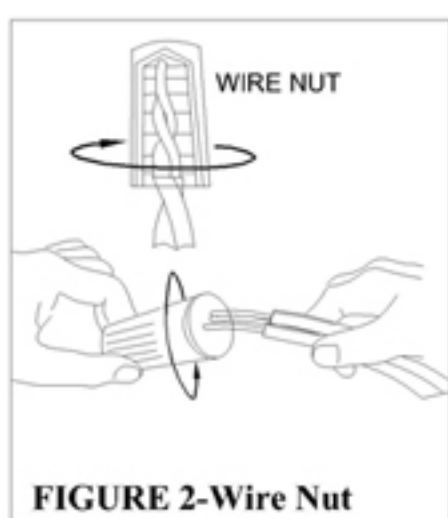 


FIGURE 2-Wire Nut



PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com

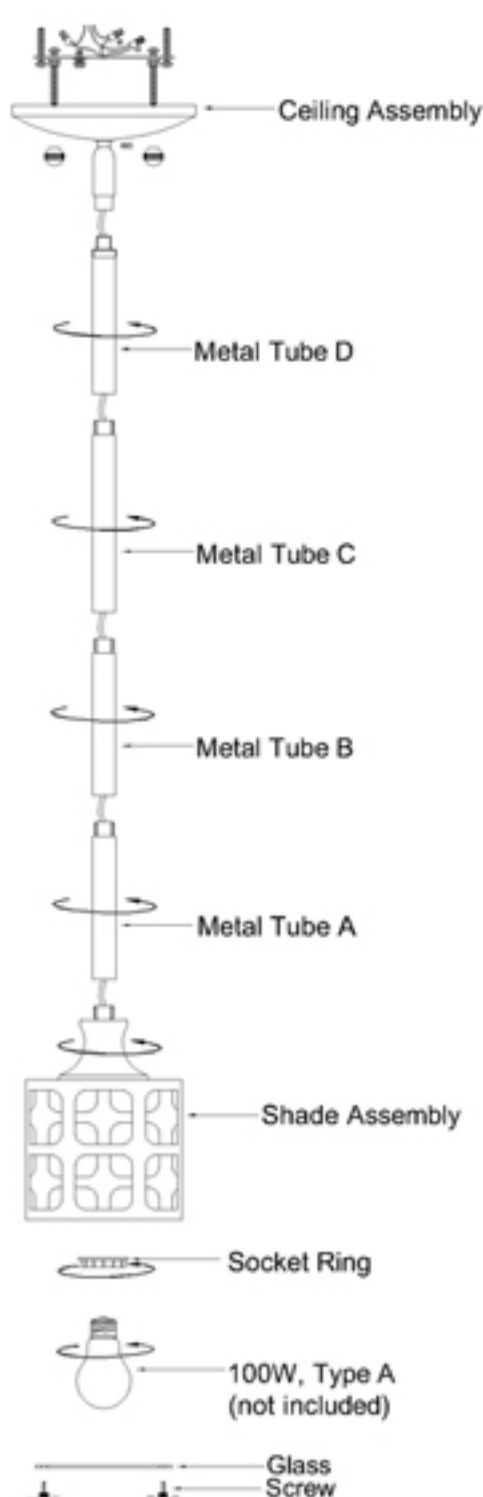

UTTERMOST

STYLE NO.: 21909 Parts and Hardware List

A.	Ceiling Assembly	1PC
B.	Ball Nut	2PCS
C.	Shade Assembly	1PC
D.	Universal Bar	1PC
E.	Mounting Screw	2PCS
F.	Ground Screw (green)	1PC
G.	Wire Nut	3PCS
H.	Outlet Box Screw	2PCS
I.	Screw	3PCS
J.	Glass	1PC

Please make sure that you have all the parts indicated before you begin assembling this item.

Please read Wiring Instructions before you begin assembling and installing your Ceiling Lamp.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock.

Assembly Instruction

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged.
2. Remove the Ball Nuts under the Canopy from the Mounting Screws, and take out the Universal Bar. Attach the Universal Bar to the Outlet Box by using two Outlet Box Screws. (See Figure 1)
3. Install the ground wire in the Universal Bar with the supplied Ground Screw (green).
4. Place the null wire, ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box. (Connecting the Wires-See Figure 2)
5. After the wires are connected, tuck them carefully inside the Outlet Box. Attach the Ceiling Assembly to the Mounting Screws and secure with two Ball Nuts. (See Figure 1)
6. Screw the Shade Assembly onto the Metal Tube (A) until tight.
7. Repeat the Step 6 with the Tube (B), (C) and (D).
8. Attach the Socket Ring onto the socket until secure. Install 100 Watt, Type A bulb (sold separately) into the socket of the fixture.
9. Place the Diffuser into the Shade and secure by the Screws.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com