



UTTERMOST

# Assembly Instructions for 21891/21933/21932/21935

Turn off the power at main fuse or circuit breaker box before starting installation, carefully unpack and identify all parts before assembly. Bulbs are not included.

1. Unpack the fixture

You should have received the following hardware:  
 Universal Mounting plate (1pc), 8/32"x1.25" Fixture Mounting Screw (2pcs), 8/32"x2.56" Mounting Screw (2pcs), Small Hex Nut (4pcs), Decorative Nut (2pcs), Wire Connector (3pcs), Plastic Washer, Metal Washer, Big Hex Nut, Cap Nut.


2. Wiring Assembly:

A. Remove the Decorative Nut (2pcs) under the Canopy and take out the Mounting Plate. Attach the Universal Mounting Plate to the Ceiling Outlet using two Mounting Screws.  
 (See the Diagram beside)

B. Attach the power supply wires to the fixture wire by connecting Black to Black (or Smooth) and White to White (or Ribbed), using two Twist-on Wire Connectors. Attach the power Supply ground wire from the Ceiling Outlet Box and the Fixture Ground Wire from the fixture to the Green Ground screw on the Mounting Bracket. After the Wires are connected, Tuck them carefully in the Outlet Box.

C. Place the Canopy over the Ceiling Outlet Box and onto the Fixture Mounting Screws until they protrude out from the Canopy for about 1/4". Remove the Canopy and secure the position by tightening the Small Hex Nut (4pcs) against the Mounting Plate. Place the Canopy back onto the fixture Mounting Screw and secure into place by using the Decorative Nut (2pcs) provided.

3. Install light Bulbs (not included). See label located at socket area for type and wattage allowed. Put the Place the Threaded Pipe onto the Hex Nut and adjust an appropriate place to it., Glass Diffuser onto the Shade, then attach Plastic Washer, Metal Washer, Big Hex Nut onto the threaded pipe, secure with Cap Nut, Installation completed

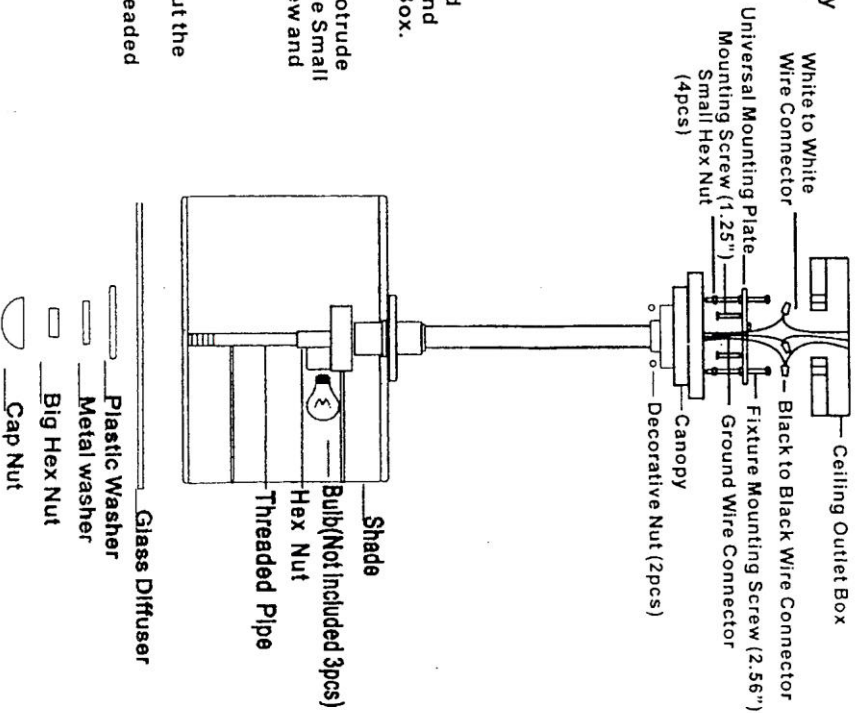

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT. VIRGINIA 24151

www.uttermost.com