


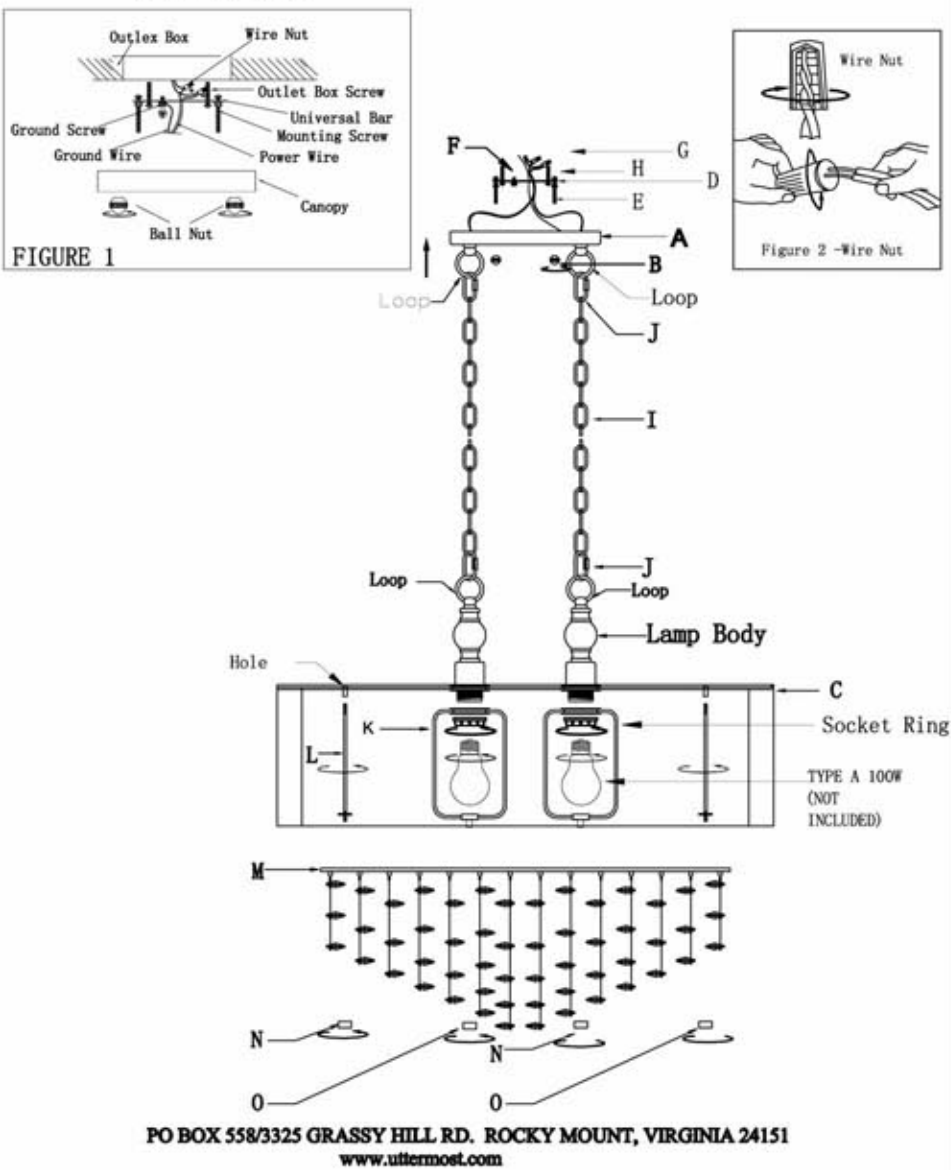

UTTERMOST

Illustration

STYLE NO. :22033




UTTERMOST

Assembly Instruction

STYLE NO. : 22033

LENGTHEN THE CHAIN INSTRUCTIONS

1. Take out the fixture wire from loop of ceiling pan carefully.
2. Open top end of the fixture chain.
3. Hook one end of extra chain into open link of fixture chain and close the link.
4. Open the other end of extra chain, hook the open link of extra chain into loop of ceiling pan and close the link.
5. Weave the fixture wires through the chain links up to the ceiling pan carefully.
6. Install complete.

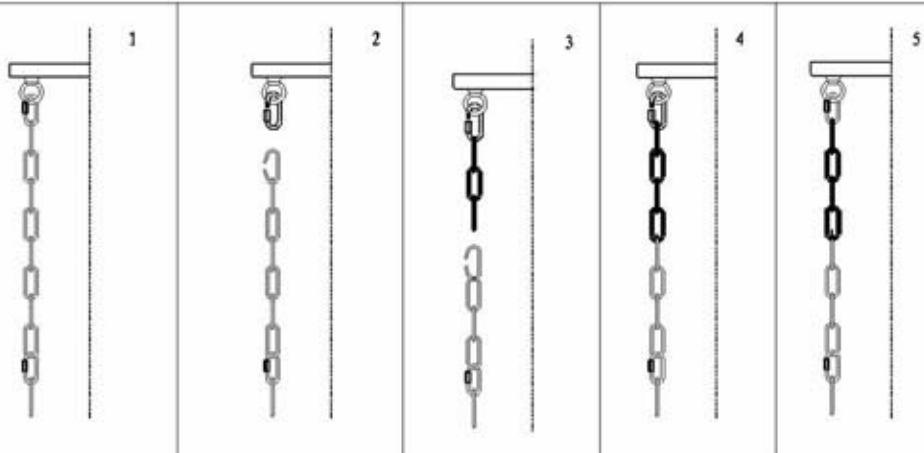

UTTERMOST

STYLE NO:22033

Parts and Hardware List

A.	Ceiling Assembly	1PC
B.	Ball Nut	2PCS
C.	Shade	1PC
D.	Universal Bar	1PC
E.	Mounting Screw	2pcs
F.	Ground Screw	1PC
G.	Wire Nut	3PCS
H.	Outlet Box Screw	2PCS
I.	Chain	2PCS
J.	Quick Links	4PC
K.	Harps	4PCS
L.	Support Tubes	4PCS
M.	Acrylic Diffuser	1PC
N.	Wooden Bar 1	2PCS
O.	Wooden Bar 2	2PCS

Please make sure that you have all the parts indicated before you begin assembly of this item

Please read Wiring Instructions before you begin assembling and installing your Chandelier

Assembly Instructions

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged.
2. Remove the Ball Nuts(B) under the Canopy from the Mounting Screws(E), and take out the Universal Bar(D). Attach the Universal Bar(D) to the Outlet Box by using two Outlet Box Screws(H). (See Figure1)
3. Install the ground wire in the Universal Bar(D) with the supplied Green Ground Screw(F).
4. Place the null wire, ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box. (Connecting the Wires-See Figure 2)
5. After the wires are connected, tuck them carefully inside the Outlet Box. Attach the Ceiling Assembly(A) to the Mounting Screws(E) and secure with two Ball Nuts(B). (See Figure1)
6. Attach two Quick Links (J) on each end of the two Chains(I) to the two Loops on the top of the Lamp Body .
7. Attach the other two Quick Links (J) on the each other end of the two Chains (I) to the two Loops of Ceiling Assembly (A).
8. Place the Support Tubes(L) on the Holes of Shade(C).
9. Place the Shade(C) and Harp(K) on the Lamp Body and secure by Socket Rings.
10. Install 2*100 Watt , Type A bulbs (sold separately) into the sockets of the fixture.
11. Place the Acrylic Diffuser (M) on the Support Tubes(L) and secure by Wooden 1(N) and Wooden 2 (O).