

DECORATIVE ACCESSORIES AND ACCENT FURNITURE


## UTTERMOST

## ASSEMBLY INSTRUCTIONS

## STYLE# 22052

## Carefully unpack all lamp parts from the carton.

- 1. Take the lamp carefully out of the Carton, and place it on a flat surface.
- 2. Be sure the power to the installation point is power off.
- 3. Place the **Ceiling Canopy** over the **Mounting Screw** and thread **Mounting Ball** onto the **Mounting Screw** to secure it ,Hand tighten until snug.
- 4.Refer to label on socket and install proper wattage bulb.(Not Included)

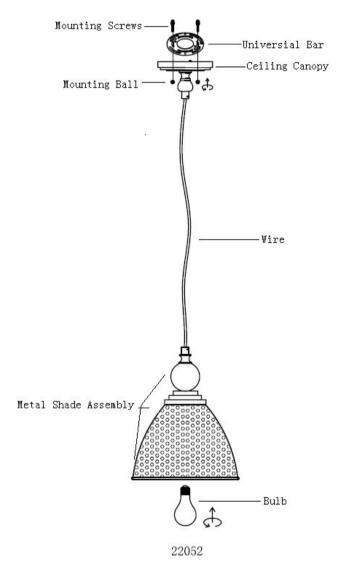

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com