



UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 22062

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Adjust the **Fixture Chain** to your desired length by removing the links if needed.
Pass Supply Wires and Ground Wire through the chosen Chain.
4. Attach one end of the **Quick Link** onto the **Fixture Loop** on the bottom **Ceiling Canopy**.
5. Place the **Ceiling Canopy** over the **Mounting Screws** and thread **Mounting Balls** onto the **Mounting Screws** to secure it. Hand tighten until snug.
6. Attach another **Quick Link** onto the **Fixture Loop** on the top of **Shade Assembly**.
7. Thread **Stem** onto Hex Coupling on the bottom of **Socket**. Hand tighten until snug.
8. Place **Diffuser**, **Rubber Washer** and **Flat Washer** onto the **Stem**, secure by thread **Hex Nut** onto Stem.
Hand tighten until snug.
9. Thread **Finial** onto the end of the **Stem**, hand tighten until snug.
10. Install bulbs (not included). See label located at socket area for type and maximum allowed wattage.

**Your installation is completed now. Restore electricity.
Retain this sheet for future reference !**

