


# UTTERMOST

## ASSEMBLY INSTRUCTIONS

### STYLE#: 22074

#### Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off
3. Fasten the **Crossbar** to the outlet box. Locate the **Nipple** and thread into the center of the **Crossbar**.
4. Locate the **Fixture Chain**、**Ceiling Canopy**、**Canopy Chain Loop**、and **Canopy Lock ring**. Pass the Fixture Supply Wire and Ground Wires through in the following order: **1)Alternate Fixture Loops in the Fixture Chain; 2)Canopy Lock ring; 3)Canopy Chain Loop; 4)Ceiling Canopy**.  
Finally, proceed to pass the wires through the **Nipple** attached to the **Crossbar**.
5. Thread the **Fixture Hook** into the **Coupling** and tighten until snug.
6. Thread the **BT58 Edison Bulb** (Not Included) onto the **Socket**. Hand tighten until snug

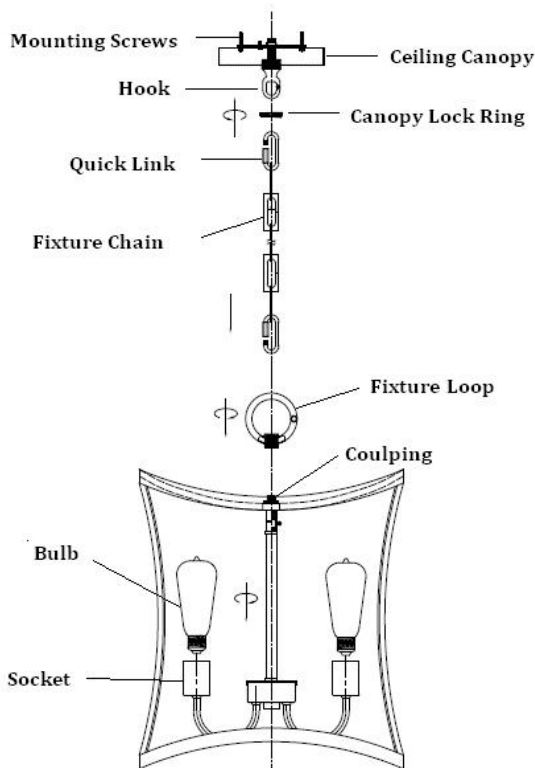

22074

