



 UTTERMOST

STYLE NO.: 22121 PARTS LIST & Hardware List:

1	Canopy	1pc	6	Mounting Screw(2-3/4")	2pcs
2	Universal Bar	1pc	7	Wire Connector	3pcs
3	Ball Finial	2pcs	8	hasp	1pcs
4	Outlet Box Screw(1-1/8")	2pcs	9	Glass Shade	1pc
5	Green Ground Screw	1pcs	10	Thread Ring	1pc

*Please make sure you have all the parts indicated above before you begin assembling this item.

Please read wiring instructions before you begin assembling and installing your Ceiling Lamp

WARNING: BEFORE INSTALLING, Make sure electricity supply is shut off to avoid a possible electric shock.

ASSEMBLY INSTRUCTIONS

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure the parts will not be damaged.
2. Remove the Ball finial under the Canopy from the Mounting Screws, and take out the Universal Bar. Attach the Universal Bar to the Outlet Box by using two Outlet Box Screws. (See Figure 1)
3. Install the Ground Wire in the Universal Bar with the supplied Green Ground Screw.
4. Place the null wire, white wire evenly against the null wire from the Outlet Box and place the live wire, black wire evenly against the live wire from the Outlet Box. (Connecting the Wire---See Figure 2)
5. After the wires are connected. Pull the black rayon wire to adjust the length as you want, Tighten it by the hasp. tuck them carefully inside the Outlet Box. (See Figure 3)
6. Attach the Canopy to the Mounting Screws and secure with two Ball Finials (See Figure 1)
7. Put the Glass Shade through the Socket holder, secure with Thread Ring.
8. Install 1*60W bulbs (not included), into the socket of the fixture.

UTTERMOST

