



UTTERMOST

## ASSEMBLY AND INSTALLATION INSTRUCTIONS

22122

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

### Installation Steps

- Carefully unpack your new fixture and lay out all the parts on a clear surface.
- Thread the Stem onto the Nipple-2.
- Raise the Nipple-1 to protrude through the holes in the Metal frame, then secure the Loop.
- Thread Hex nut-2 onto Nipple, insert Lock washer over the end of Nipple, thread Nipple through Mounting bar and secure with Hex nut-1 continue until tight.
- Thread Green ground screw into the hole near the two dimples of Mounting bar. Secure Mounting bar to outlet box with Outlet box screws.
- Adjust chain length as needed, weave Fixture Wire and Ground Wire through Chain links. Open Quick link-2, connect Loop to one end link of Chain and close Quick link-2.
- Thread Collar ring to Collar loop, secure Collar loop to Nipple-1 through Canopy. Open Quick link-1, connect Collar loop to the other one link of Chain and close Quick link-1.
- Make Wire connections with Wire Connector:
  - The smooth wire (w/ marking) from fixture to Black Wire from power source.
  - The ribbed wire (w/o marking) from Fixture to White Wire from power source.
  - Attach the Ground Wire and house ground wire to the Mounting bar with the green Ground screw.
 Carefully tuck wires back into the Outlet box.
- After wires are connected, place the Canopy on the ceiling and secure Collar ring. Then tuck them carefully inside outlet box.
- Place the Cap onto the Socket candle cover.
- Install the light bulb in accordance with the fixture's specifications.
- DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
- Turn on the power at fuse or Circuit Box.

