ECORATIVE ACCESSORIES AND ACCENT FURNITURE

## ASSEMBLY INSTRUCTIONS

UTTERMOST

## STYLE# 22132

## Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.

2. Be sure the power to the installation point is power off.

**3.**Fasten the **Cross bar** to the outlet box . Locate the **Nipple** and the **Washer**, then thread them into the center of the **Cross Bar**.

4.Secure the Nipple onto the Canopy with Loop #1.

5.Connect the Chain and Loop #2 with the Quick Link.

6.Pass supply wire through Loop #2 and Quick Link, then wind onto the Chain and thread from the center of the Cross Bar.7.The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.

8. Connect the wires as shown : A. Connect the House Gound Wire to the Fixture Ground Wire.


B.Connect the House White or Ribbed Wire to the Fixture Supply Wire (White or Ribbed Side).

C.Connect the House Black/Red Wire to the Fixtrue Supply Wire (Black or Smooth Side).

D.Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.

9.Place the Glass Shade carefully onto the Socket. Then thread the Metal Sleeve onto the Socket.

**10.**Lock the **Socket Collar** with a **Plastic Wrench** to secure the **Glass Shade** and the **Metal Sleeve**. Hand tighten until snug. **11.**Install correct **Bulb** referring to fixture markings and/or labels for maximum wattage. (Bulb Included)

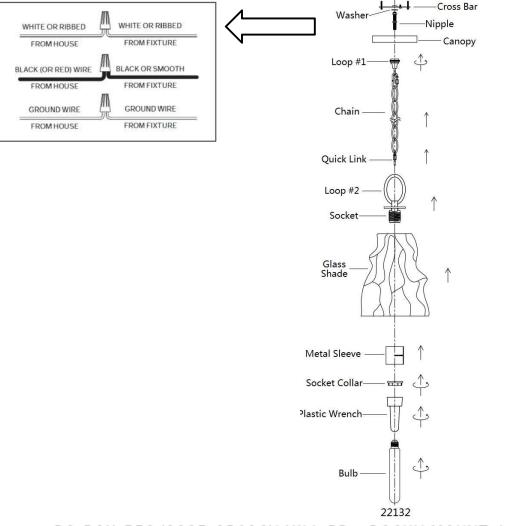

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com