




 

UTTERMOST

# ASSEMBLY INSTRUCTIONS

## STYLE#22140

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the carton, and place it on a flatsurface.
2. Be sure the power to the installation point is powered off.
3. Fasten the **Cross Bar** to the outlet box. Locate the **Nipple** and the **Washer**, then thread them into the center of the **Cross Bar**.
4. Adjust cord length as desired for your ceiling height. **Remove excess cord.**
5. Secure the **Nipple** onto the **Canopy** with **Loop#1**.
6. Connect the **Chain** and **Loop #1** with **Quick Link #1**, then connect **Loop #2** with **Quick Link#2**.
7. Pass supply wire through **Loop #2** and **Quick Link #2**, then wind onto the **Chain** and thread from the center of the **Cross Bar**.
8. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.
9. Connect the wires as shown: A. Connect the House Ground Wire to the Fixture Ground Wire.  
B. Connect the House White or Ribbed Wire to the Fixture Supply Wire (White or Ribbed Side).  
C. Connect the House Black/Red Wire to the Fixture Supply Wire (Black or Smooth Side).  
D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
10. Place the **Glass Shade** carefully onto the **socket**. Then thread the **Metal Sleeve** onto the **Socket**.
11. Lock the **Socket Collar** with a **Plastic Wrench** to secure the **Glass Shade** and the **Metal Sleeve**. Hand tighten until snug.
12. Install correct **Bulbs** referring to fixture markings and/or labels for maximum wattage. (Bulbs Included)

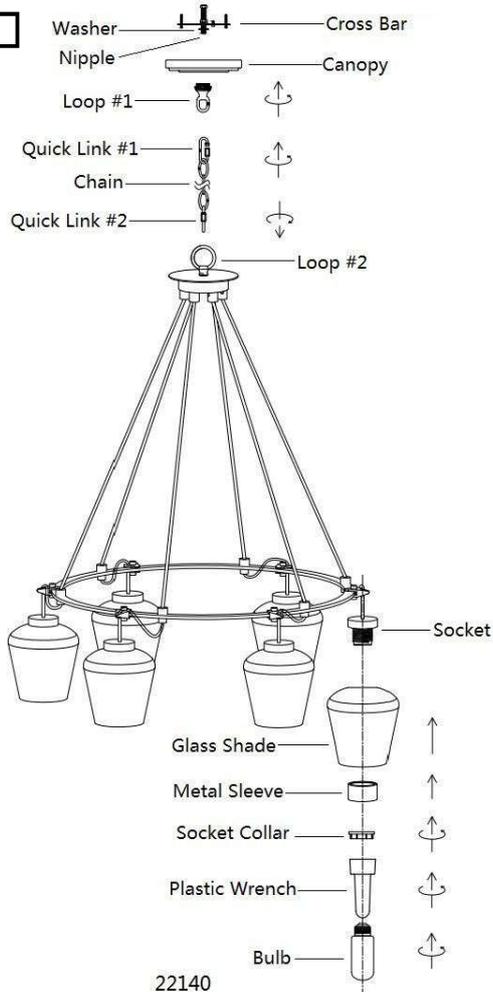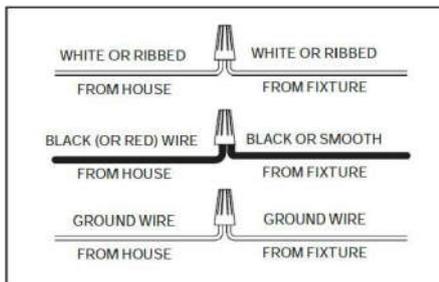

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com

