



UTTERMOST

ASSEMBLY AND INSTALLATION INSTRUCTIONS

22155 22156 22157 22158

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Installation Steps

- Carefully unpack your new fixture and lay out all the parts on a clear surface.
- Choose the suitable number of stems and install the Stem-1, Stem-2 into the Tube and Swivel.
- Thread the Mounting screws into the matching holes of the Mounting bar, and tighten with the Hex nut. Thread the Ground screw into the hole of the Mounting bar. Secure the Mounting bar to the outlet box with the Outlet box screws.
- Make Wire connections with Wire Connector:
 - The smooth wire (w/ marking) from fixture to Black Wire from power source.
 - The ribbed wire (w/o marking) from Fixture to White Wire from power source.
 - Attach the Ground Wire and house ground wire to the Mounting bar with the green Ground screw.
 Carefully tuck wires back into the Outlet Box.
- Place the fixture Canopy over the two Mounting screws so they protrude through the holes in the Canopy. Thread the Ball nut onto the Mounting screws and continue turning until the fixture is snug against the ceiling.
- Install the light bulb (Not Supplied) in accordance with the fixture's specifications.

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

- For OUTDOOR USE- Slip glass over socket and seat firmly into glass holder. For INDOOR use do not use glass.
- Turn on the power at fuse or Circuit Box. Turn power off before starting.

