



UTTERMOST

ASSEMBLY AND INSTALLATION INSTRUCTIONS

22164

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Installation Steps

- Carefully unpack your new fixture and lay out all the parts on a clear surface.
 - Thread the Stem onto the Nipple-4 and Nipple-3.
 - Thread the Loop onto the Nipple-2.
 - Thread Hex nut-2 onto Nipple-1, insert Lock washer over the end of Nipple-1, thread Nipple-1 through Mounting bar and secure with Hex nut-1 continue until tight.
 - Thread Green ground screw into the hole near the two dimples of Mounting bar. Secure Mounting bar to outlet box with Outlet box screws.
 - Adjust chain length as needed, weave Fixture Wire and Ground Wire through Chain links. Open Quick link-2, connect Loop to one end link of Chain and close Quick link-2.
 - Secure Collar loop to Nipple-1. Weave Fixture Wires and Ground Wire through collar ring, Canopy and collar loop into outlet box. Open Quick link-1, connect Collar loop to the other one link of Chain and close Quick link-1.
 - Make Wire connections with Wire Connector:
 - The smooth wire (w/ marking) from fixture to Black Wire from power source.
 - The ribbed wire (w/o marking) from Fixture to White Wire from power source.
 - Attach the Ground Wire and house ground wire to the Mounting bar with the green Ground screw.
 Carefully tuck wires back into the Outlet box.
 - After wires are connected, place the Canopy on the ceiling and secure Collar ring. Then tuck them carefully inside outlet box.
 - Install the light bulb (Not Supplied) in accordance with the fixture's specifications.
- DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
- Turn on the power at fuse or Circuit Box. Turn power off before starting.

