



UTTERMOST

ASSEMBLY AND INSTALLATION INSTRUCTIONS

22180

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Installation Steps

1. Turn on the power at fuse or Circuit Box. Turn power off before starting.
2. Carefully unpack your new fixture and lay out all the parts on a clear surface.

NOTE: If the Base is skewed, please adjust it with hand.

3. Connect the Hook-2 of the Rod to the Loop-3 and connect the Loop-2 of the Rod to the Hook-1.
4. Thread Hex nut-2 onto Nipple, insert Lock washer over the end of Nipple, thread Nipple through Mounting bar and secure with Hex nut-1 continue until tight.
5. Thread Green ground screw into the hole near the two dimples of Mounting bar. Secure Mounting bar to outlet box with Outlet box screws.
6. Adjust chain length as needed, weave Fixture Wire and Ground Wire through Chain links. Open Quick link-2, connect Loop-1 to one end link of Chain and close Quick link-2.
7. Secure Collar loop to Nipple. Weave Fixture Wires and Ground Wire through collar ring, Canopy and collar loop into outlet box. Open Quick link-1, connect Collar loop to the other one link of Chain and close Quick link-1.
8. Make Wire connections with Wire Connector:
 - The smooth wire (w/ marking) from fixture to Black Wire from power source.
 - The ribbed wire (w/o marking) from Fixture to White Wire from power source.
 - Attach the Ground Wire and house ground wire to the Mounting bar with the green Ground screw.
 Carefully tuck wires back into the Outlet box.
9. After wires are connected, place the Canopy on the ceiling and secure Collar ring. Then tuck them carefully inside outlet box.
10. Place the Cap onto the Socket.
11. Install the light bulbs (Not Supplied) in accordance with the fixture's specifications.

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

