



UTTERMOST

ASSEMBLY AND INSTALLATION INSTRUCTIONS

STYLE# **22184**

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Fasten the **Crossbar** to the **Canopy**. Thread **Mounting Ball** to secure it. Hand tighten until snug.
4. Determine the number of **Rods** to be assembled according to your hanging height. Adjust the length of wire needed for your installation, remove excess. Pass supply wires through the **Rods**. Thread the **Rods** to connect the **Swivel** and **Nipple** of the **Fixture Body**. Hand tighten until snug.
5. Pass the supply wires through the **Swivel** and **Canopy** and the hole in the middle of the **Cross Bar**.
6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.
Connect the wires as shown. **A.** Connect the House Ground Wire to the Fixture Ground Wire.
B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
7. Turn the Part A, Part B and Part C clockwise slowly by 90 degree until the socket facing up.
8. Install the correct **Edison Bulb** (Included) onto the **Socket** referring to fixture markings and/or labels for maximum wattage.

Your installation is completed now. Restore electricity.

