UTTERMOST ASSEMBLY INSTRUCTIONS

STYLE#: 22186

Carefully unpack all lamp parts from the carton.

- 1. Take the lamp carefully out of the Carton, and place it on a flat surface.
- 2. Be sure the power to the installation point is power off.and please follow the below three steps to assembly:

Step one:turn out the swivel socket and put the glass shade onto the socket.

Step two:turn the glass shade in the right position

Step three, Please follow up the steps as below:

3. Adjust the length of wire needed for your installation, remove excess. Determine the number of Rods to be assembled to the Fixture Body according to your hanging height.Pass the Supply Wires with Ground Wire through the closen Rods and Swivel. Thread the Rods to connect Nipple. Hand tighten until sung.

- 4. Pass the supply wires through the Universal Bar assembly, Secure the Universal Bar to the Outlet Box with Outlet Box Screws
- 5. Place the Ceiling Canopy over the Mounting Screws and secure with Mounting Balls. Hand-tighten until snug.

6. Connect the wires as shown.a.Connect the House Ground Wire to the Fixture Ground Wire.
b.Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
c.Connect the House Black (or Red) Wire to the FixtureSupply Wire (Black or Smooth Side).

d.Wrap each connection with approved electrical tapeand carefully stuff all of the connected wires into the Outlet Box.

7. Thread the Metal Sleave onto the Socket. Then use Plastic Wrench to lock

the Socket Collar to secure the Glass Shade. Hand tighten until snug.

8. Install the Edison Bulb (Not Included) into the Socket until snug.

Your installation is completed now. Restore electricity.



