

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 22191

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Fasten the **Cross bar** to the outlet box. Locate the **Nipple** and the **Washer**, then thread them into the center of the **Cross Bar**.
4. Fasten the **Cross bar** to the outlet box. Secure the **Nipple** onto the **Canopy** with **Loop #1**.
5. Adjust chain length as needed. Thread **Quick Link#1** into **Loop #1** on the Canopy, then **Quick Link #2** into Loop #2 on the **Lamp Body**. Hand tighten until snug.
6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.
Connect the wires as shown.**A.** Connect the House Ground Wire to the Fixture Ground Wire.
B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
7. Install the correct **Edison Bulb** (Not Included) onto the **Socket** referring to fixture markings and/or labels for maximum wattage.

