

# ASSEMBLY INSTRUCTIONS FOR 22463

## Please carefully read and save this instruction

Caution: To avoid possible electric shock, turn off the main power circuit breaker before installing the fixture.

### 1. Unpack the fixture

You should have received the following hardware:

Universal Mounting plate (1pc), 8/32" x 1.25"

Fixture Mounting Screw (2pcs), 8/32" x 2.56" Mounting Screw (2pcs)

Hex Nut (4pcs), Decorative Nut (2pcs), Wire Connector (3pcs).

### 2. Wiring Assembly :

(1). Remove the Decorative Nut (2pcs) under the Canopy and take out the Mounting Plate, Attach the Universal Mounting Plate to the ceiling Outlet using two Mounting Screw. (see the Diagram beside)

(2). Attach the power supply wires to the fixture wire by connecting Black to Black (or Smooth) and White to White (or Ribbed), using two Twist-on Wire Connectors. Attach the Power Supply ground wires from the Ceiling Outlet Box and the Fixture Ground wire from the fixture to the Green Ground Screw on the Mounting Bracket. After the Wires are connected, Tuck them carefully in the Outlet Box

(3). Place the Canopy over the Ceiling Outlet Box and onto the Fixture Mounting Screws until they protrude out from the Canopy for about 1/4",. Remove the Canopy and secure the position by tightening the Hex Nut (4pcs) against the Mounting Plate

Place the Canopy back onto the Fixture Mounting Screws and secure into place by using the Decorative Nut (2pcs) provided.

### 3. Put two Decorative Nuts onto shade's backboard installation completed.

Install 1 Light Bulb (Not included). See relamping label located at socket area for type and wattage

