 
MANUFACTURERS OF WALL DECOR, LIGHTING,



UTTERMOST

ASSEMBLY & INSTALLATION INSTRUCTIONS FOR #22535

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

Carefully unpack all lamp parts from the carton.

- 1. Take the parts out of the mounting package.
- 2. Screw (3) the CIRCULAR MOUNTING BRACKET (2) to each end of the outlet box.
- 3. Pull the SUPPLY WIRES (6&8) and the SUPPLY GROUND WIRE (5) out from the OUTLET BOX (1). Attach the CIRCULAR MOUNTING BRACKET (2) assembly to the OUTLET BOX (1). (See Fig.1).
- 4. Put the FIXTURE SCREW and HEX NUT (12) into the hole of the CIRCULAR MOUNTING BRACKET (2).
- 5. Unravel the fixture's white and black lead wires including the ground wire and attach to the power supply wires using wire connectors. Loop the FIXTURE GROUND WIRE (4) around the GROUND SCREW (11) of the mounting bracket. Note: Be sure to provide an extra 3" length of the GROUND WIRE (4). Connect the remaining FIXTURE GROUND WIRE (4) to the supply ground wire using WIRE CONNECTOR (10). Place wiring and connections in the OUTLET BOX (1). (See Fig.1).
- 6. Adjust mounting bracket and lock the FIXTURE BODY (13) onto the FIXTURE SCREW and HEX NUT (12) with the DECORATIVE NUT (14). (See Fig.1).
- 7. Screw the bulb into the Lamp socket (15) and make sure they do not exceed the maximum wattage specified on the fixture's wattage rating capacity. **MAXIMUM 60W.**
- 5. INSTALLATION IS NOW COMPLETED.

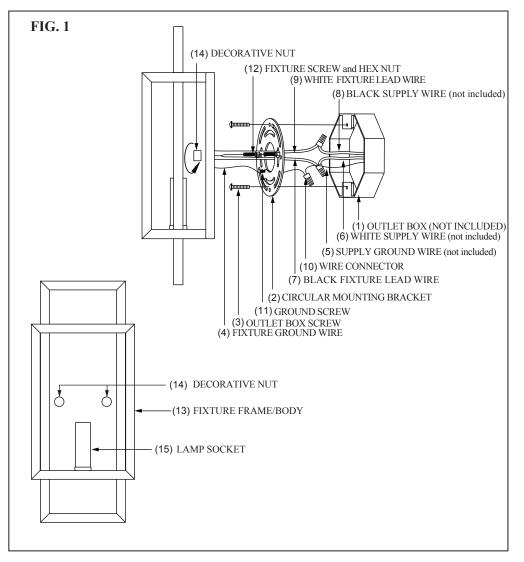

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com