


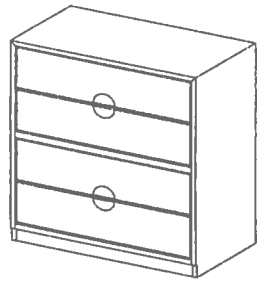

TIP KID INSTRUCTION

STYLE : 22930

UTTERMOST



 
HARDWARE

**A**  
Plastic Anchors  
(Ø4\*35mmL)



4 PCS

**B**  
Hanger tip kid



4 PCS

**C**  
Screw  
(Ø4\*30mmL)



 
4 PCS

**D**  
Screw  
(Ø4\*20mmL)





4 PCS

**E**  
Key brass




2 PCS


Step 1:

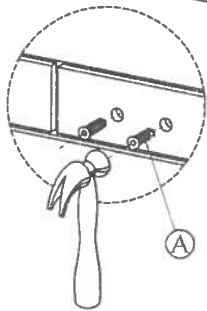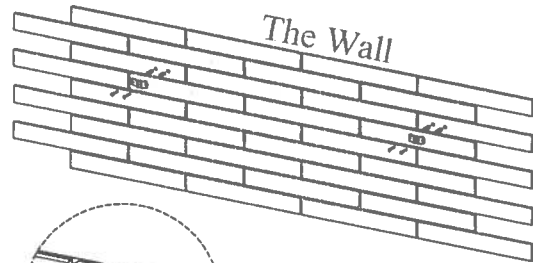

Hammer  
(Not supplied)

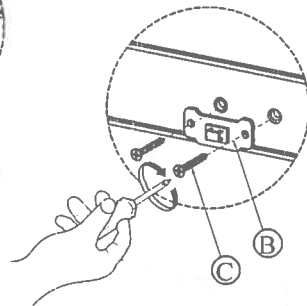

Step 2:

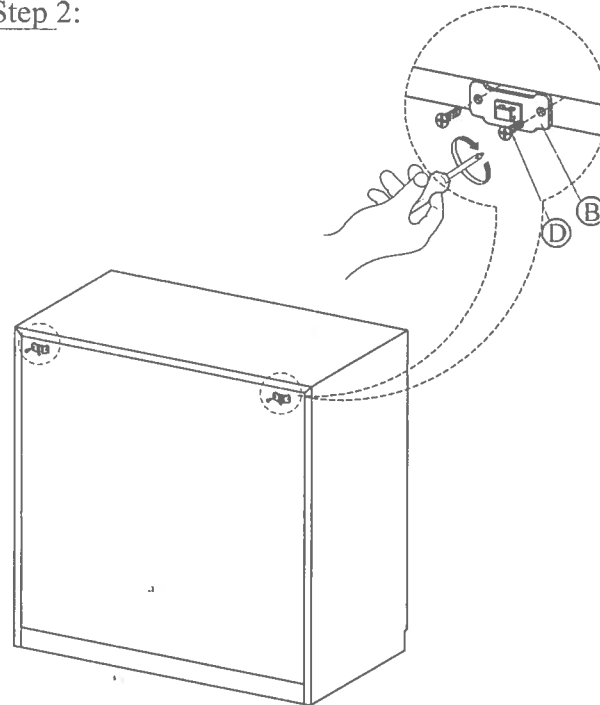

Step 3:

