










UTTERMOST

ASSEMBLY INSTRUCTIONS


ITEM: 23726

PARTS LIST


NO	DRAWING	PARTS NAME	Q'TY	NO	PARTS NAME	DRAWING	Q'TY
A		FLAT WASHER 5/16"*3/4"	8PCS	1	SEAT FRAME		1PC
B		LOCK WASHER 5/16"	8PCS				
C		BOLTS DIA 5/16"*2"	8PCS	2	FRONT LEG		2PCS
D		ALLEN WRENCH 5/16"	1PC	3	LEFT BACK LEG		1PC
				4	RIGHT BACK LEG		1PC
				5	REMOVABLE BACK CUSHION		1PC

ASSEMBLY BOLTS MAY NEED TIGHTEND AFTER USE


STEP 1 Pls move the button first.

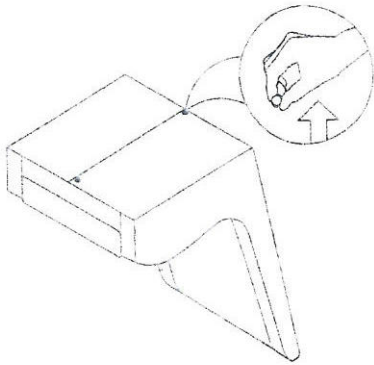


STEP 2

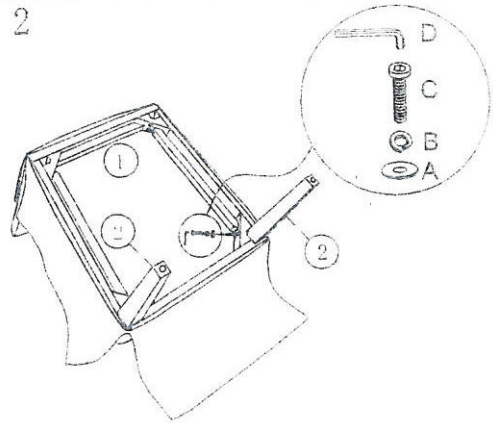


STEP 3

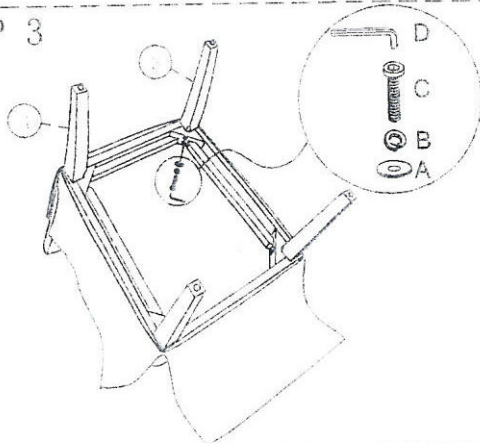

STEP 4

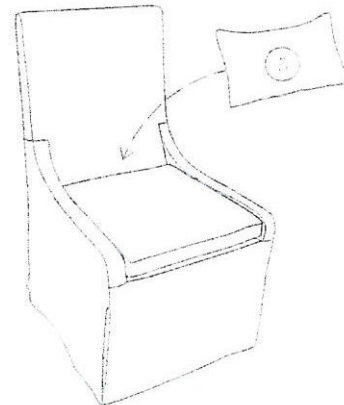

Note: the cover can be removed.

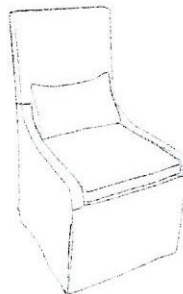

re-tighten the leg bolts after using a period of time

To avoid voidy products, please follow below steps to assemble:

1) Attach the legs. Do not completely tighten the bolts that hold the legs.

2) Set the chair on the floor to level, and then finish tightening the leg bolts.