







# UTTERMOST


## ASSEMBLY INSTRUCTIONS

ITEM:23829


PARTS LIST							
NO	DRAWING	PARTS NAME	Q'TY	NO	PARTS NAME	DRAWING	Q'TY
A		FLAT WASHER 5/16"*3/4"	8PCS	1	SEAT FRAME		1PC
B		LOCK WASHER 5/16"	8PCS	2	LEG		2PCS
C		BOLTS DIA 5/16"*1-3/4"	8PCS				
D		ALLEN WRENCH 5/16"	1PC				

ASSEMBLY BOLTS MAY NEED TIGHTEND AFTER


STEP 1 <sup>USE</sup> Pull open the zippers on bottom of the seat cushion.

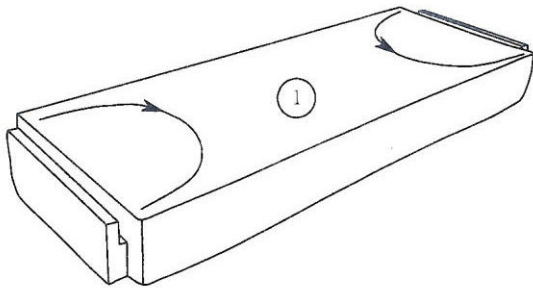

STEP 2 Attach the legs with the seat cushion, then tighten the bolts.

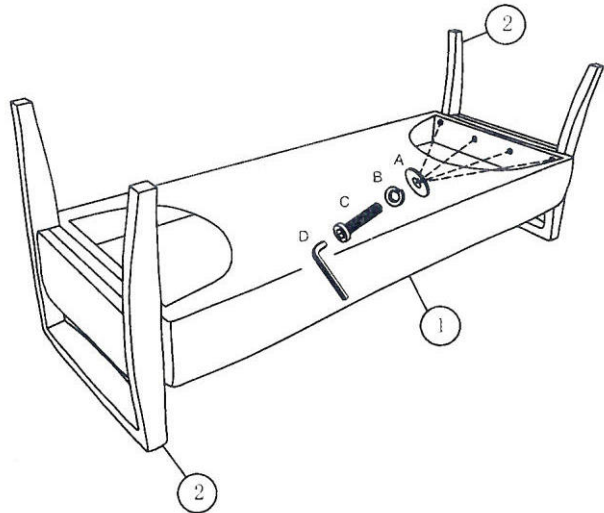

STEP 3 Pull close the zippers after finished assembling.

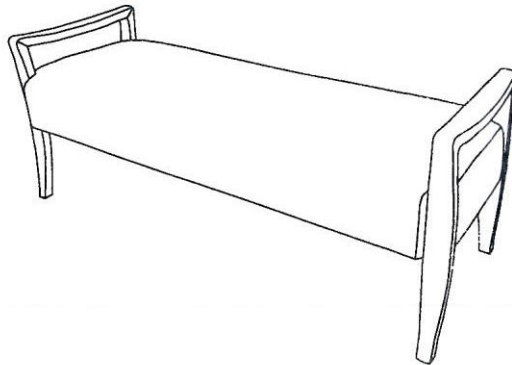

To avoid wobbly product , please follow below steps to assemble:

- 1) Attach the legs. Do not completely tighten the bolts that hold the legs.
- 2) Set the chair on the floor to level and then finish tightening the leg bolts.