







UTTERMOST

ASSEMBLY INSTRUCTIONS


ITEM:23849

PARTS LIST


NO	DRAWING	PARTS NAME	Q'TY	NO	PARTS NAME	DRAWING	Q'TY
A		FLAT WASHER 1/4"*5/8"	12PCS	1	SEAT FRAME		1PC
B		LOCK WASHER 1/4"	12PCS	2	LEG		2PCS
C		BOLTS DIA 1/4"*1"	12PCS				
D		ALLEN WRENCH 1/4"	1PC				

ASSEMBLY BOLTS MAY NEED TIGHTEND AFTER USE

STEP 1

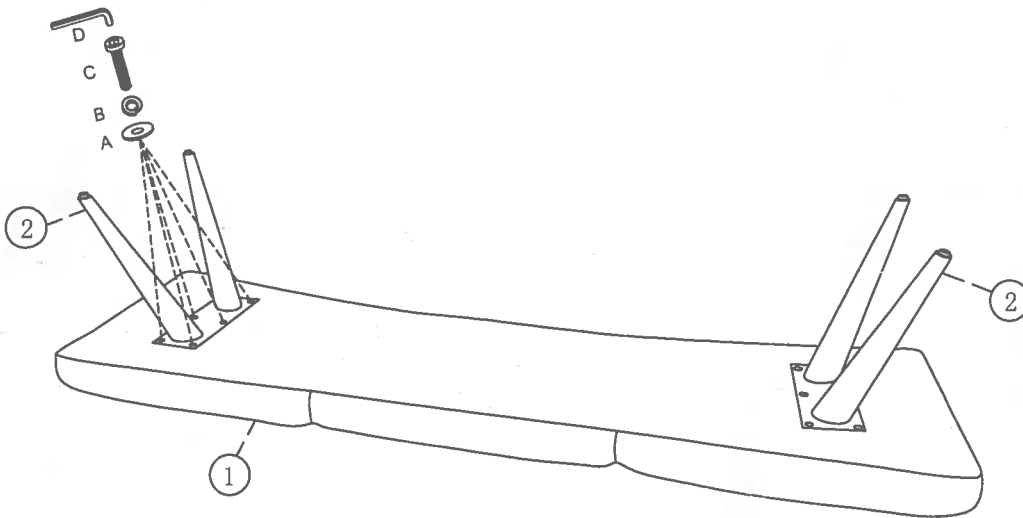

STEP 2

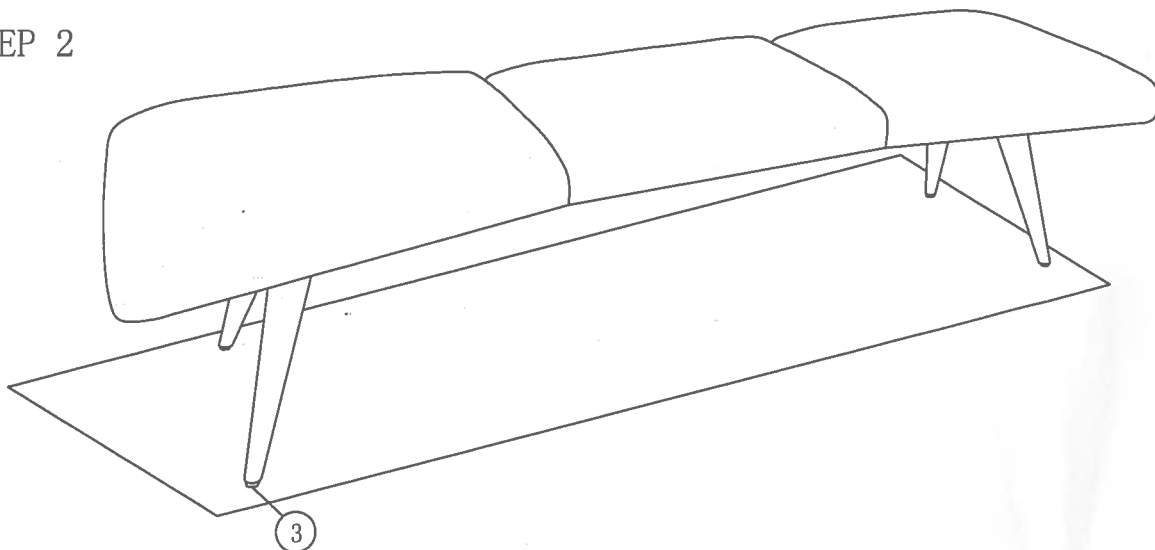

To avoid wobbly product , please follow below steps to assemble:

- 1) Set the chair on the floor to level.
- 2) It can be adjusted the feet cap ③ to level.

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151

www.uttermost.com