









UTTERMOST


ASSEMBLY INSTRUCTIONS

ITEM:23851


PARTS LIST							
NO	DRAWING	PARTS NAME	Q'TY	NO	PARTS NAME	DRAWING	Q'TY
A		FLAT WASHER 5/16"*3/4"	8PCS	①	SEAT FRAME		1PC
B		LOCK WASHER 5/16"	8PCS				
C		BOLTS DIA 5/16"*1"	4PCS	②	RIGHT LEG		1PC
D		BOLTS DIA 5/16"*2"	4PCS				
E		ALLEN WRENCH 5/16"	1PC	③	LEFT LEG		1PC

ASSEMBLY BOLTS MAY NEED TIGHTEND AFTER USE

STEP 1 Put RIGHT LEG ② on the SEAT FRAME ① right side, match the holes on wood frame with the wood dowel and the holes on iron sheet, then secure using BOLTS (C), WASHER (B) with ALLEN WRENCH (E), Leave BOLTS loose by 1/4 turn.

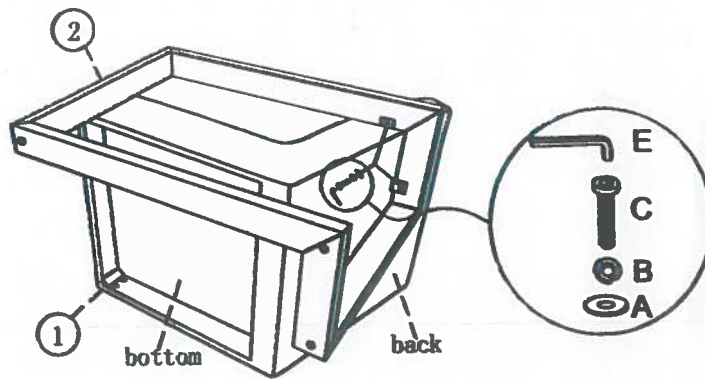

STEP 2 Assemble the holes on front leg and holes under the chair, secure using BOLTS (D) WASHER (B), with ALLEN WRENCH (E), leave Bolts loose by 1/4 turn.

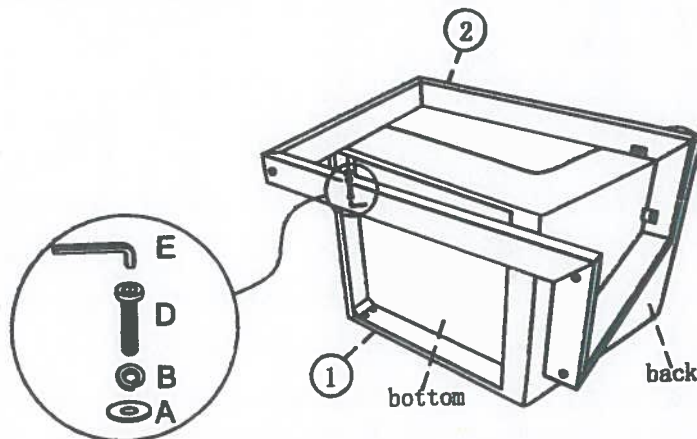


re-tighten the leg bolts after using a period of time

UTTERMOST


ASSEMBLY INSTRUCTIONS

ITEM: 23851


STEP 3 Put LEFT LEG (3) on the SEAT FRAME (1) left side, match the holes on wood frame with the wood dowel and the holes on iron sheet, then secure using Bolt (C) WASHER (B) with ALLEN WRENCH (E), leave Bolts loose by 1/4 turn.

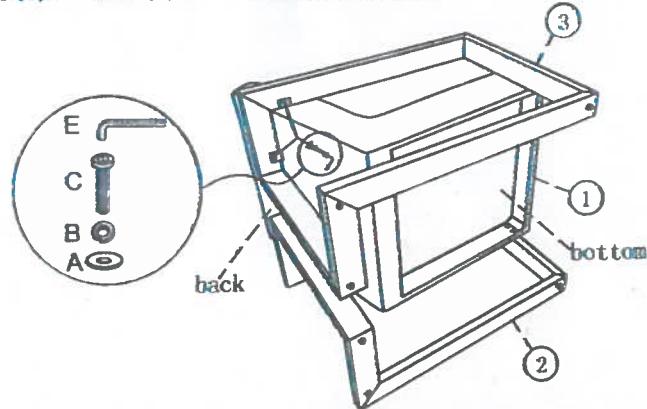

STEP 4 Assemble the holes on front leg and the holes under the chair, secure using BOLTS (D), WASHER (B) with ALLEN WRENCH (E), leave Bolts loose by 1/4 turn.

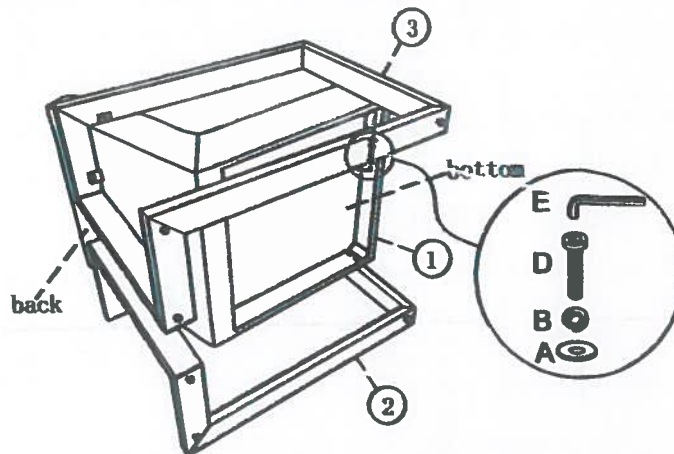

STEP 5 Put the chair on floor to level, then finish tightening all Bolts to 100% turn.

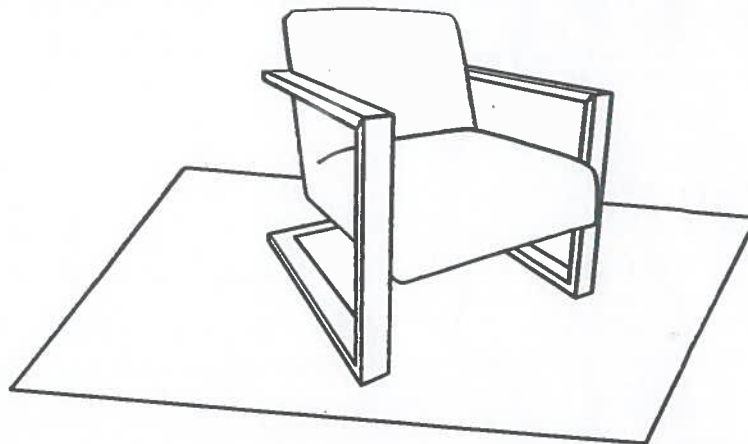

re-tighten the leg bolts after using a period of time

To avoid wobbly product, please follow below steps to assemble:

- 1) Attach the legs. Do not completely tighten the bolts that hold the legs.
- 2) Set the chair on the floor to level and then finish tightening the leg bolts.