




UTTERMOST

24551 Assembly Instruction

Parts/Hardware list

A	Top shelf	1PC	C	Top glass	1PC
B	Tripod Leg	1PC	D	Felt pad	4PCS

1. Take the parts carefully out of the carton, and place them on a flat and soft surface.
Make sure the parts will not be damaged.
2. Screw the Top shelf (A) on Tripod Leg (B) till tight .
3. Stick the Felt pad (D) on the bottom of 3 feet of Tripod Leg (B).
4. Please carefully place the Top glass (C) on the Top shelf (A) .

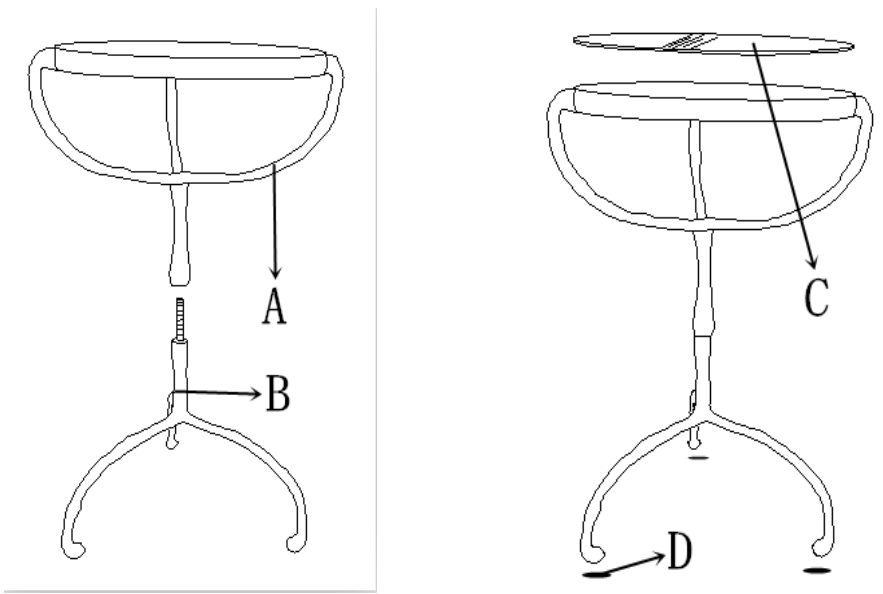

5. To clean, wipe with soft dry cloth.

