



UTTERMOST

24784 Assembly Instruction

Parts/Hardware list

A	Legs	2 PCS	E	Glass	1 PC
B	Frame	1 PC	F	Screws	12 PCS
C	Legs	2 PCS	G	Wrench	1 pc
D	Marble	1 PC	H	Felt pad	20PCS
I	Washers	10PCS			

1. Take the parts carefully out of the carton, and place them on a flat and soft surface, making sure that the parts will not be damaged.
2. Assemble Legs (A) and Frame (B) together using 2 screws.
3. Assemble Legs (C) and Frame(B) together using 2 screws.
4. Assemble Marble (D) and shelf frame together using 8 screws, then use wrench to tighten all screws. Add washers to level the legs. Details please refer to step 7.
5. Stick the Felt pad (H) on the bottom of the legs.
6. Turn over table, and place the Glass (E) on the Frame (B) .
7. If table is not stable and find an area under the legs that do not touch floor, return to step 4, loosen screws under table top at corresponding position, then add one or more washers between table top and screw hole on leg frame.
8. Softly clean & wipe with dry cloth.

