

UTTERMOST ASSEMBLY INSTRUCTIONS

Part A

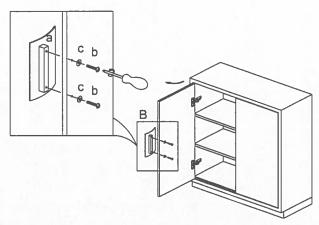

Part B

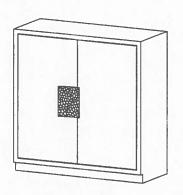

STYLE:24825

Hardware list

а	Handle	1 PC
b	Washer	2 PCS
С	Bolt	2 PCS

- 1.Take the furniture carefully out of the carton and then place the furniture on a flat surface make sure the furniture will not be damaged.
- 2. Open the door, remove handle and reinstall handle on outside of door.
- 3. Assembly is complete. Adjustable foot pads on bottom of piece.

Clean with a soft dry cloth.