

THANK YOU FOR YOUR PURCHASE .

PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

ASSEMBLY INSTRUCTIONS:

SKU#:26554

1. UNPACK ALL PARTS FROM CARTON CAREFULLY;
2. SCREW THE SOCKET ASSEMBLY ("B") CLOCKWISE TO THE BASE("A")
3. ATTACH HARP("D") TO THE SADDLE("C")
4. PLACE THE SHADE("E") ONTO THE TOP OF HARP("D") , AND SCREW THE FINIAL("F") CLOCKWISE TO FIX THE SHADE

IMPORTANT SAFETY INSTRUCTION:

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER). AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com

