THANK YOU FOR YOUR PURCHASE.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:


FINIAL"F"

ASSEMBLY INSTRUCTIONS: SKU#:26678

- 1. UNPACK ALL PARTS FROM CARTON CAREFULLY;
- 2. SCREW THE SOCKET ASSEMBLY"B" CLOCKWISE TO THE BASE"A".
- 3. PUT HARP"D" TO THE SADDLE"C".
- 4. PLACE THE SHADE("E") ONTO THE TOP OF HARP("D"), AND SCREW THE FINIAL("F") CLOCKWISE TO FIX THE SHADE.

IMPORTANT SAFETY INSTRUCTION:

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER).
AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL
FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT, REVERSE THE PLUG.
IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN
EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

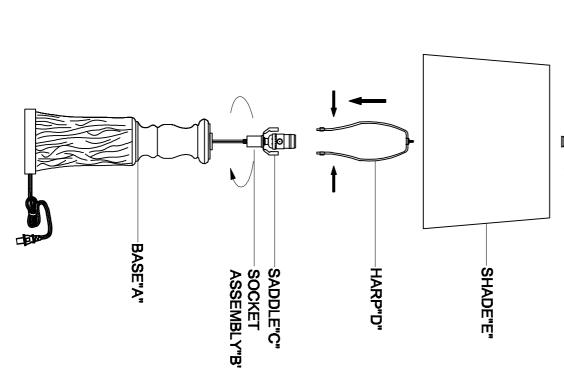

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com