




UTTERMOST

# ASSEMBLY INSTRUCTIONS

**STYLE# 27223-1**

**Careful unpack all lamp parts from the carton.**

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Thread Part A onto the **Lamp Base** and turn clockwise to tighten secured.
3. Locate the **Harp** by pressing the ends of the **Harp** into the **Harp Base** on the top of **Base**.
4. Place the **Shade** over the top end of the **Harp**. Secure by thread the **Finial** onto the **Harp**. Hand tighten until snug.
5. Install correct Bulbs referring to fixture markings and /or labels for maximum wattage. (Not Included)

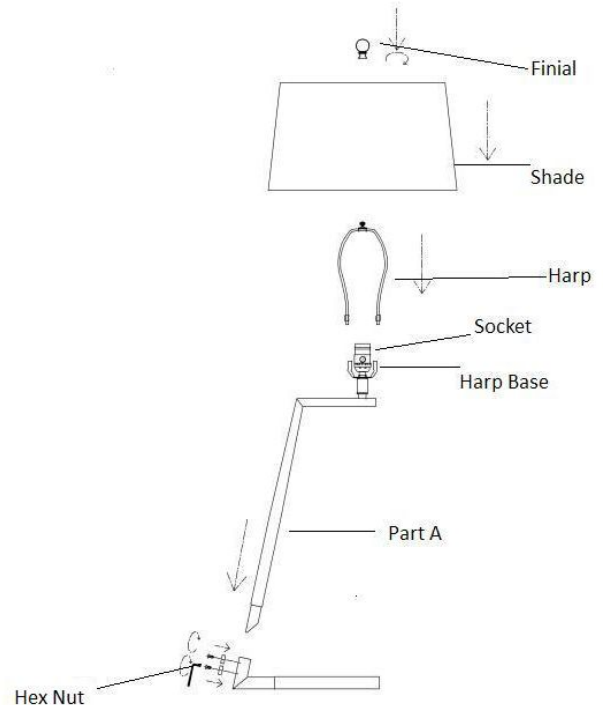

27223-1

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug ( one blade is wider than the other ) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.