

THANK YOU FOR YOUR PURCHASE.  
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

**ASSEMBLY INSTRUCTIONS:**  
**SKU#:27261**

1. UNPACK ALL PARTS FROM CARTON CAREFULLY;
2. SCREW THE SOCKET ASSEMBLY "B" CLOCKWISE TO THE BASE "A".
3. PUT HARP "D" TO THE SADDLE "C".
4. PLACE THE SHADE ("E") ONTO THE TOP OF HARP ("D"), AND SCREW THE FINIAL ("F") CLOCKWISE TO FIX THE SHADE.

**IMPORTANT SAFETY INSTRUCTION:**

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER). AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151  
[www.uttermost.com](http://www.uttermost.com)

