

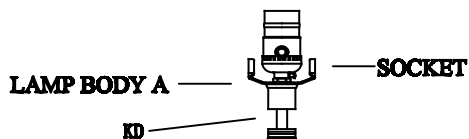


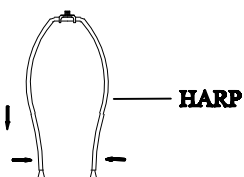


UTTERMOST

Assembly Instruction

STYLE NO.: 27535-1

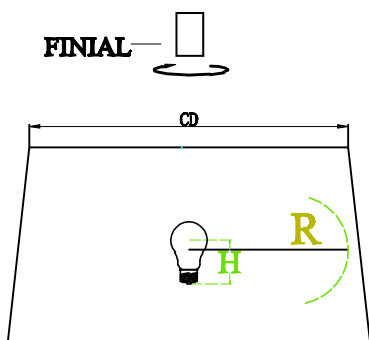

 LAMP BODY B



1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Screwing Lamp body A to Lamp Body B until tightly,
3. Attach the harp onto the saddle as drawing.
4. Place the finial disc and the shade onto the top of the harp, then tighten the finial clockwise until secure.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 3 1/4".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.