


UTTERMOST

ASSEMBLY INSTRUCTIONS

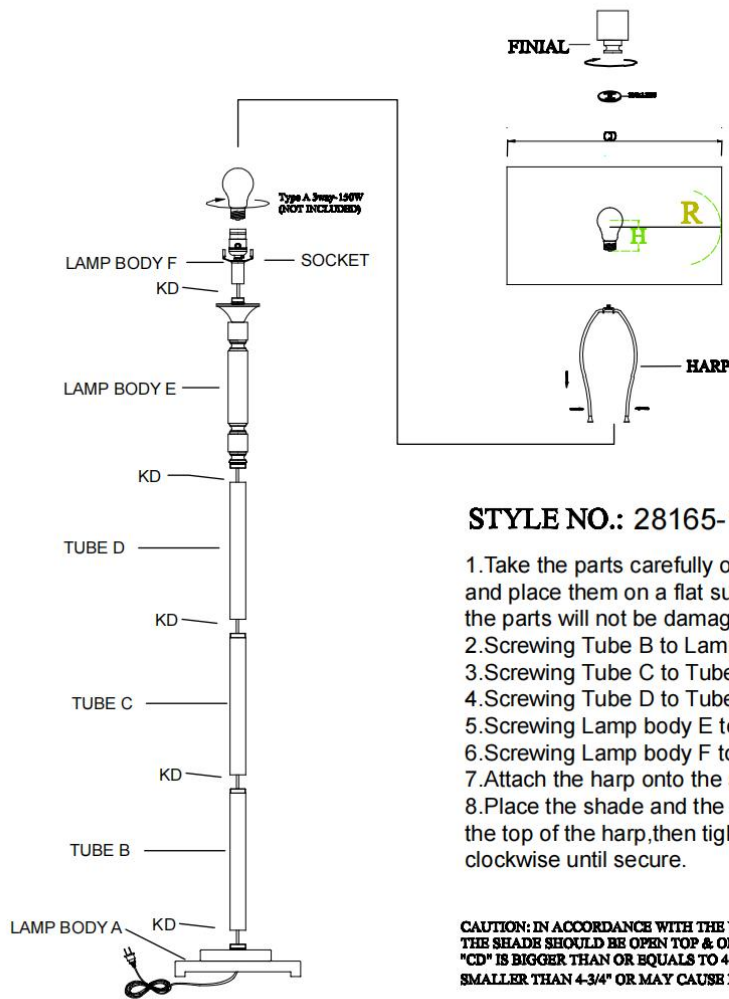

STYLE NO.: 28165-1

1. Take the parts carefully out of carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Screwing Tube B to Lamp Body A until tightly,
3. Screwing Tube C to Tube B until tightly,
4. Screwing Tube D to Tube C until tightly,
5. Screwing Lamp body E to Tube C until tightly,
6. Screwing Lamp body F to Lamp Body E until tightly,
7. Attach the harp onto the saddle as drawing.
8. Place the shade and the finial disc onto the top of the harp, then tighten the finial clockwise until secure.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO 4-1/2", "H" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "R" IS 3 1/4".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.