



UTTERMOST

ASSEMBLY INSTRUCTIONS


ITEM#: 28185

PARTS LIST:

**A. Finial B. Shade C. Harp D. Top Body E. Bottom Body
F. Plastic Washer**

****Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**

- 1. Place All the parts in a soft position on the floor.**
- 2. Put F(Plastic Washer) onto Bottom Body(E)
Rotate the Top Body(D) into Bottom Body(E),
Pull the cord ,make sure it does not get damaged.**
- 3. Put the harp(C) into the harp base,and then put the
shade(B) onto the harp(C).**
- 4. Put the finial(A) onto the harp and
turn clockwise to tight securely.**
- 5. Use 3-Way 150W bulb(not included).**

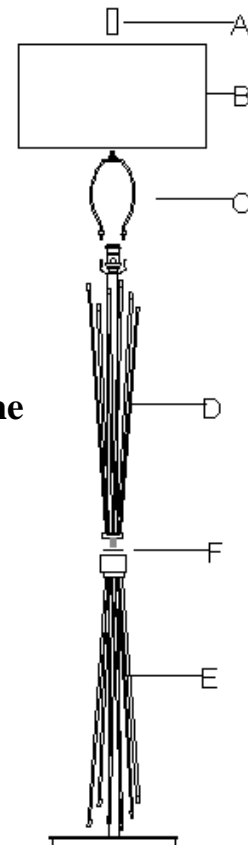

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. reverse the plug, If it still does not fit, Contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted .Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD ROCKY MOUNT VIRGINIA 24151

www.uttermost.com