

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 28196-1

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.

2. Thread **Part A** into the **Base** by turning **Part A**

clockwise to tighten until snug.

(Please Note that when assembling, avoid Part A touching the surface of the Base to avoid scratching the paint. After the assembly is completed, Please tear off the PE bag used to protect the Base.)

3. Thread **Part B** into **Part A** by turning **Part B**

clockwise to tighten until snug.

4. Thread **Part C** into **Part B** by turning **Part C**

clockwise to tighten until snug.

5. Locate the **Harp** by pressing the ends of the


Harp into the **Harp Base** on the top of **Base**.

6. Place the **Shade** over the top end of the **Harp**.

Secure by thread the **Finial** onto the **Harp**.

Hand tighten until snug.

7. Install correct Bulbs referring to fixture markings and /or labels for maximum wattage. (Not Included)

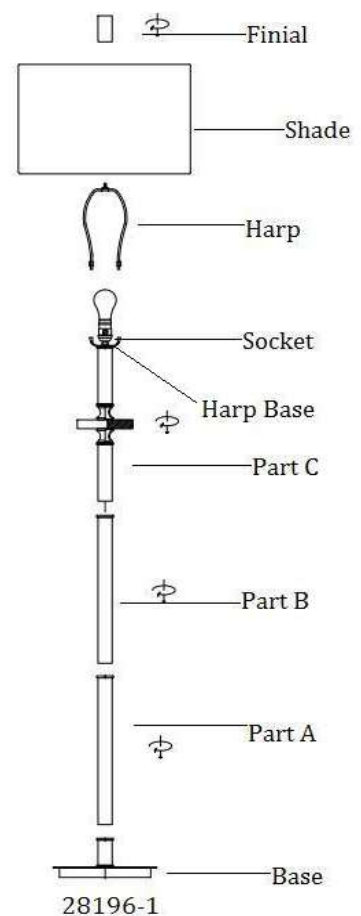

IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.